

PocketBook Pro 612

User Manual

Table of Contents

SAFETY PRECAUTIONS	4
---------------------------------	----------

APPEARANCE	10
-------------------------	-----------

Front View	10
------------	----

Back View	12
-----------	----

TECHNICAL CHARACTERISTICS	14
--	-----------

GETTING STARTED	15
------------------------------	-----------

Charging Battery	15
------------------	----

Turning On	16
------------	----

Modes of Device Operation	17
---------------------------	----

Loading Files	18
---------------	----

Navigation	19
------------	----

Using the Stylus	20
------------------	----

Working with On-Screen keyboard	22
---------------------------------	----

MAIN MENU	24
Main panel	25
Widgets	26
Status Bar	30
Task List	32
 READING BOOKS	 34
Library	34
Library Renewal	39
Loading of the Protected Electronic Books (Adobe DRM)	39
Reading Mode	44
Using the Stylus	55
 SOFTWARE	 57
Favorites	57
Notes	57
Applications	58
Dictionary	64
Music	65

Photo	67
Search	68
NETWORK CONNECTIONS	69
Bluetooth	70
Configuring Wi-Fi Connection	76
Closing Network Connections	78
CONFIGURATION	79
FIRMWARE UPDATE.....	89
TROUBLESHOOTING	93
CUSTOMER SUPPORT.....	96
COMPLIANCE WITH INTERNATIONAL STANDARDS	97

Safety Precautions

Before start working with the Device, please, read this section carefully. Following these instructions will help you ensure your safety and extend service life of the Device.

Storage, Carriage and Usage Conditions

Device operating temperature range is 0°C to 40°C, so don't expose the Device to excessively high or low temperatures. Never leave cables near heat sources. Heated cables or their insulation may become deformed or damaged, which could lead to fire or electric shock.

Try to avoid next impacts:

- direct sunlight
- direct flame or smoke (cigarette, lighter, open fire etc.)

- exposure to liquids or damp (do not use the Device in the rain, in the street at higher humidity, near bodies of water etc.)
- penetration of liquids or moisture
- exposure to strong electromagnetic fields, electrostatic charges and artificial sources of UV electromagnetic radiation
- excessive mechanical pressure on the screen, connectors and keys of the Device.

Do not leave the Device for a long time in poorly ventilated environment, e.g. in a car or in closed tight boxes/packaging.

Neither drop nor try to bend the Device. Protect the screen from objects that may scratch or damage it. To ensure adequate protection of the screen, we recommend storing the Device in a protective and/or hard cover.

Keep away from children.

Maintenance

Do not disassemble or modify the book reader.

Do not use the Device with a damaged battery, charger (broken case, poor contact, broken feed cable) or SD card. If the battery is damaged (cracked case, leakage of electrolyte, off-shape etc.) it should be replaced by the authorized personnel. Usage of home-made or modified batteries may cause an explosion and/or damage the Device.

Do not use organic or inorganic solvents (e.g. benzoyl etc.) to clean the screen/case. Use a soft cloth to remove dust from the Device's surface. Apply a few drops of distilled water to remove dirt.

Up to five faulty pixels are acceptable in the screen and do not constitute a warrantable defect of the screen.

By the end of product guarantee term, please contact the nearest authorized service facility for examination on the subject of security is maintained.

For detailed information about service centers in your region please visit the official website of PocketBook International: <http://www.pocketbook-int.com>.

RF Safety

The Device receives and transmits radio frequencies and may interfere with radio communications and other electronic equipment. If you use personal medical Devices (e.g. a pacemaker or hearing aid) please contact your doctor or the manufacturer to

learn whether or not such medical devices are protected against external RF signals.

Do not use wireless communication in places where it is prohibited, e.g. onboard a plane and in hospitals – this may affect airborne avionics or medical equipment.

Utilization

Incorrect disposal of this Device may have adverse impacts on the environment and public health. To prevent such consequences follow the device-specific disposal requirements. Recycling of these materials helps preserve natural resources. For more information regarding recycling issues please contact local municipal authorities, your domestic waste collection service, store where you purchased the Device, or the authorized service center.




Disposal of electric and electronic components (the Directive is applicable to the EU and other European countries where separate waste disposal systems exist). In other countries dispose batteries accordingly to local laws.

Do not destroy the battery by burning it to avoid the danger of explosion!


Appearance

FRONT VIEW

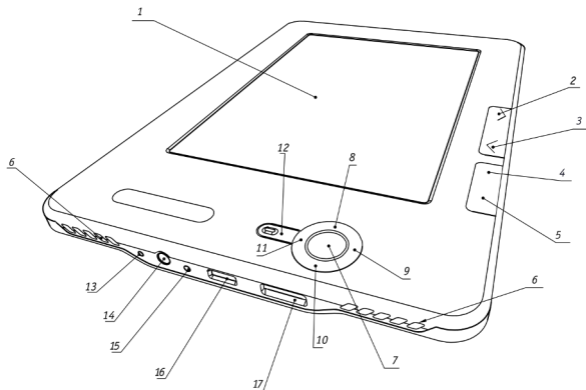

1. Touch screen
2. **Forward** – turns page forward
3. **Backward** – turns page backward
4. **Home** – returns to Main Menu
5. **Menu** – opens context menu
6. Speakers – 2×0.5 W speakers

- 7. **OK** – confirms selection
 - 8. **Up**
 - 9. **Right**
 - 10. **Down**
 - 11. **Left**
- navigation keys
- 12. **Return** – goes back to the previous menu
 - 13. **Reset** button – restarts the Device
 - 14. 3.5 mm audio jack
 - 15. LED indicator – indicates the Device's power mode. Flashing orange – charging, solid orange – charged, solid green – power consumption
 - 16. Micro-USB port – designed for connecting your Device to either PC or charger (optional) via the micro-USB cable
 - 17. Micro SD card slot – used to insert an external microSD memory card

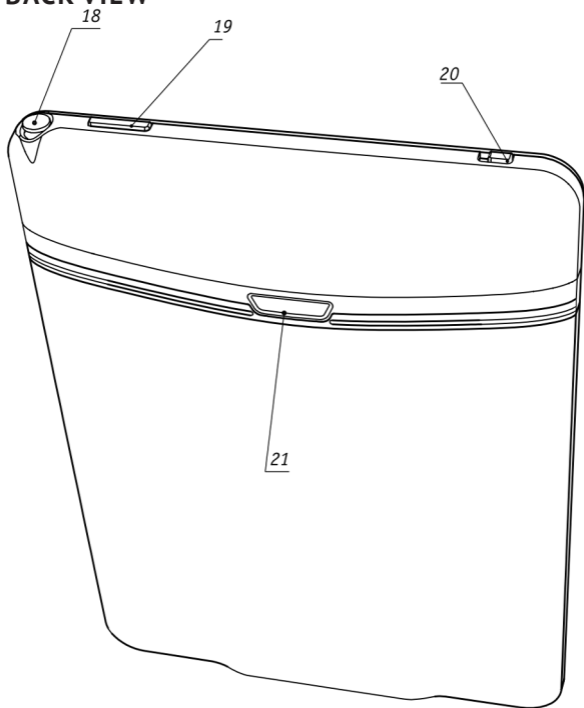BACK VIEW

18. Stylus

19. On/Off – long press switches the Device on/off, short one – opens express menu

20. Wi-Fi on/off - enabling/disabling wireless Wi-Fi connection

21. Battery compartment cover button

NOTE You can configure key mapping to your own in *Configuration > Key mapping*.

Technical Characteristics

Display	6" E Ink Vizplex™ 800×600, 166 dpi, black/white
Touch Panel	EMR (E-Writing, pen touch module)
Processor	533 MHz
RAM	256 MB
Internal Storage	2 GiB
Operating system	Linux®
Communications	Wi-Fi™ (b/g) Bluetooth™ 2.1 USB 2.0 (480 Mb/s)
Memory slot	microSD up to 32 GiB
Audio output	3.5 mm stereo jack 2×0.5 W speakers
Accelerometer	Yes
Book formats	PDF, EPUB (including DRM), PDF, EPUB, FB2, TXT, DJVU, RTF, HTML, CHM, DOC, TCR, FB2.ZIP, PRC, DOCX
Image formats	JPEG, BMP, PNG, TIFF
Audio format	MP3
Battery	Li-Polymer, 3.7 V, 1530 mAh
Dimensions	132×182×10.6 mm
Weight	276 g

Getting Started

IN THIS CHAPTER...

You will learn how to prepare the Device to work and about main control features.

CHARGING BATTERY

To extend battery lifetime, it's recommended to charge the Device for the first time from 8 to 12 hours in the off state. You can charge the battery from PC using USB-cable or from the power line using charger (optional).

To charge the battery for the first time, do the following:

1. Connect the Device to a computer or charger with USB-cable. Indicator will start blinking orange as soon, as charging starts

2. When the battery is fully charged, indicator turns solid orange. Now you can disconnect the Device and turn it on for the first use.

If the Device is on when you connect the cable to PC, a dialog window asking to select action – *PC link* or *Charge* – will appear. Charge will start if corresponding mode selected only.

TURNING ON

To turn on the Device, press and hold **On/Off** button for a few seconds until startup logo will appear. When the Device is ready to operate, an image will be changed to Main menu or last opened book, depending on settings (*Configuration > At startup, open*).

MODES OF DEVICE OPERATION

Normal operating mode is the main mode of Device operation. Green light of indicator signalizes about power consumption (e.g. screen refresh, network connection or music playback).

Sleep mode is the power-saving mode of operation. The Device actually switches off during user idle time to save battery charge. No power is required for E Ink screen to maintain a displayed image. Running applications are saved in RAM of the Device.

Safe mode – service mode for Device load with manufacturer's settings. To load the Device in this mode, hold the **Home** button while turning it on.

LOADING FILES

Connect the Device to the PC using micro-USB cable.

NOTE The Device should be kept on while transferring files.

You will be prompted to select USB mode *PC Link* or *Charge* either. Select *PC Link*. Operating system of computer will detect Device's storage as removable disk (if SD card installed – as two ones). Now you can copy files to the Device or SD card using Explorer or other file manager.

ATTENTION After copying files safely remove the Device before disconnect the cable!

NAVIGATION

Use navigation buttons **Up**, **Down**, **Left**, **Right** to select required item (e.g. book, media file, application, widget or menu item). Press **OK** button shortly to open selected. Continuous **OK** press opens item context menu (if available) Press **Return** button to return to the previous menu, **Home** button to return to Main menu. Continuous **Return** press opens short task list, short **On/Off** button press – full one. To open section's menu, press **Menu** button.

Also you can configure key mapping to your own in *Configuration > Key mapping* section.


USING THE STYLUS

To calibrate the stylus initially, go to *Configuration > Maintenance > Calibrate Touch panel*. Touch the crosses appearing on the screen. It's recommended to calibrate touch panel periodically to keep accurate Device control with stylus.

The stylus can be used as follows:

- for navigation – touch selected item to open it, continuous touch opens item's context menu (if available)
- for making graphic notes while reading (see more in *Notes* section)
- for turning pages and zooming in reading mode
- for playback control while listening to the music (by touching playback buttons)
- for drawing in Scribble application.

For the most precise Device control by stylus, it's recommended to hold it perpendicularly to the screen (within 15 degrees), as it shown on a figure. Using the stylus on a scratched or dirty touch screen can cause error of positioning up to 10%.

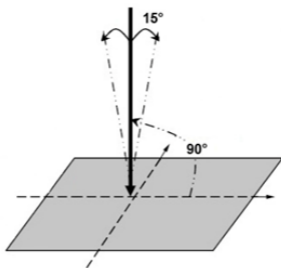


WORKING WITH ON-SCREEN KEYBOARD

On-screen keyboard is used when it's necessary to enter text information, for example, for search or network connection credentials.

To type a symbol, select it with navigation keys and press **OK**, or press symbol or control key with stylus.

To switch to another input language, press the current language button. To add the language to the onscreen keyboard layout go to *Configuration > Keyboard*.

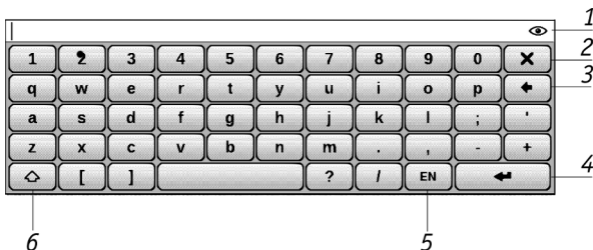

1. An eye icon appears when keyboard is used to type in some kind of password (e.g. Wi-Fi). Touch this icon to display the entered text.

2. Close the on-screen keyboard

3. Erase last typed symbol

4. Enter the typed text

5. Change input language

6. Change case.

Main Menu

IN THIS CHAPTER...

You will learn about basic elements of user interface of the Device.

Main menu contains main functional and control software elements (main panel and widgets) displayed after turning on and launching the Device (if the corresponding option in *Configuration > At start-up, open* is selected). To access Main menu from other application, press **Home** button or press several times **Back** button. Appearance of Main menu can be changed in correspondent *Configuration* section.

MAIN PANEL

This Main menu section contains Device's main software elements:

- Library
- Favorites
- Notes
- Applications
- Dictionary
- Photo
- Music
- Search
- Configuration

Detailed information about each Main Panel section see in *Software* section of the Manual.

WIDGETS

Widget is a brief view of a particular application. To bring up an application in full screen, open the widget as usual application. Context menu allows changing or configuring widget.

Last opened books

Displays recently opened books list. Number of displayed books depends on Main menu appearance settings. Widget settings allow toggle view between list and thumbnails. You cannot change this widget.

Clock

Digital or analog clock (toggles in widget context menu).

Calendar

Displays recent month calendar. In full-screen mode displays recent year calendar.

Sudoku

Quick launch of Sudoku – popular Japanese puzzle.

Dictionary

Opens *Dictionary* application

Music player

Displays current track and provides basic music playback control: play/pause, previous/next track.

Calculator

Simple calculator allows you to perform 4 arithmetic operations, calculate per cent, and take the square root. By pressing the button in the right bottom corner of the widget you can switch to full-screen application Engineering Calculator (to see more in *Applications*).

eBook

Quick access to online bookstores. You can switch between stores in widget context menu.

You can set up several stores in settings file eBook.cfg. This is a text file, located on internal Device storage in folder \system\config\widgets\eBook and containing widget parameters, separated by commas.

Example:

```
Bookland,bookland.bmp,http://bookland.net/go,1,1,1  
Libri.de,libri.bmp,http://ers.libri.de/home,1,1,1
```

To change settings copy file eBook.cfg to PC and edit it with any text editor (e.g. Windows Notepad). Widget parameters are described below.

Parameter Name	Format	Description	Example
Store name	String (up to 12 symbols)	Displayed as widget title	BookLand
Logo file name	string	.bmp file should be located in folder \system\config\widgets\ eBook. The image should have resolution 235×205	Bookland.bmp
Web-site address	string	Link to web page opens after widget activation	http://book-land.net/go
Serial number transfer flag	1 or 0	Sends Device serial number. Can be used by some stores for automatic log in	1
Device model transfer flag	1 or 0	Sends Device's model and manufacturer info	1
Connection type transfer flag	1 or 0	Sends information about connection type (either Wi-Fi or 3G)	0





After editing file, copy it to the internal Device storage to \system\config\widgets\eBook folder.

PocketNews

Launches PocketNews application (see *Software > Applications > PocketNews*).

STATUS BAR

Status bar is located at the bottom of the screen and displays next service information:

- Date and time
- Battery charge
-  – Multitasking icon – touch this icon to open running tasks list
-  – Wi-Fi is active: touch it with stylus to open connection info
 -  – Bluetooth is active: touch it with stylus to view connection info
 -  – Bluetooth headset is connected

-  – Music player is on.

In reading mode date changes to information about book: current page number/total page count, book title and current read percentage.

Battery charge and time are displayed always.

NOTE In sleep mode, the clock is removed from the status bar to save power for screen update.

After touching status bar clock with stylus, calendar and calculator will appear. To hide them, touch status bar one more time or press **Back** button.

TASK LIST




Device software supports multitasking, and you can quickly switch between running applications in several ways:




- by touching status bar icon with stylus
- by opening short task list with continuous

Back button press

- by calling extended Task list with short **On/Off** button press.

Except task switching, you can force close running applications: select an application, bring up context menu by pressing **Menu** button and select *Delete task*. Besides task management, you can also access quickly some Device control features:

-  – Lock keyboard. To unlock, touch key icon with stylus or press **On/Off** button
-  – Turn on/off Bluetooth
-  – Open wireless connections list

-  – Make screenshot. The images are saved in screens folder
-  – Open music player
-  – Switch off the Device.

You can force close applications via extended Task list only, short task list doesn't support this feature.

NOTE Return to Main menu by pressing **Home** button doesn't close application; it is still running in background. That causes, for example, that read percentage displayed in Library doesn't change after you exit the book by pressing **Home**. To close application completely, press **Back** button.

Reading Books

IN THIS CHAPTER...

You will learn how to use reading software, fill in your library and configure the Device for the most comfortable reading.

LIBRARY

Library is e-books file manager. To open a book, touch its title with stylus or select it using navigation keys and press OK. Library menu allows to filter, group, sort, change appearance of the section and perform search.

Filtration criteria

- All Books – all books on selected storage are displayed
- Now reading – books were opened and read more than one page
- Favorites.

Grouping criteria

Depending on selected grouping next parameters are displayed as folders' titles:

- Folder – real folder name
- Author – an alphabet is added at the top of the screen
- Series
- Genre
- Format.


Sorting criteria

- File names
- Book titles
- Last opened
- Creation date
- Series
- Author


Sorting can be ascending or descending.


Books list views

≡ Simple – in this mode next information is displayed:

- Folder or file format icon
- Book title
- Location icon (if file is located on memory card)
- Status icons and read percentage:
 -  Now reading

-  Read
-  Favorite

 Detailed – in this mode information about author and file size added

 Thumbnails – in this mode book cover, status icons and file size are displayed

Storage-dependent appearance has three options:

- Internal + memory card
- Internal
- Memory card.

Information block at the bottom of the screen displays read books and storage status.

Context menu allows proceeding with next file and folder operations:

- Open (if item can be opened with alternative reader program – Open with...)
- File – file operations
 - Rename
 - Move to folder
 - Delete
- Add to/Remove from Favorites
- Mark as read/unread
- Send to... – send book via Bluetooth
- Information – brief information about book/folder.

LIBRARY RENEWAL

You can copy books into internal storage of the Device or to external SD-card like it described in *Loading Files* section, or download it directly from online bookstores.

NOTE Books, downloaded from online bookstores are saved to root folder of internal storage of the Device.

LOADING OF THE PROTECTED ELECTRONIC BOOKS (ADOBE DRM)

You must register on the www.adobe.com site to be able to use the book protected format (*Sign in>Create an Adobe Account*).

Downloading Book Using the *.acsm Link

1. Visit the www.adobe.com site using a PC browser.

NOTE The current browser version does not support Flash Player

2. Go the *Products* section

3. Follow the *Digital Editions* link in the alphabetical index of products

4. Open the *Sample eBook library* link at the bottom of the page to enter the library

5. Select the book and click *Download item* button

6. The file download window will appear on the screen. The file name with .acsm extension is indicated in the file name. Click *Save* button

7. The URLLink.acsm link will appear after saving on your PC

NOTE The same sequence of actions also allows you to download a link to a protected book of any online book shop.

Take the following actions to open a protected book (DRM) on your Device:

1. Copy the book link file (*.acsm) to the Device.
2. Find and open this file on your Device.
3. Follow on-screen instructions to activate your Device. Use the on-screen keyboard to enter login and password of your account into the Device activation form at www.adobe.com to proceed. Then you will be able to download the book.
4. Download a book.

The full version of the book will be available in the *Digital Edition* folder after download is completed. The downloaded book is protected with DRM and it cannot be opened by an unregistered user.

Book downloading via PC

1. Open the *Adobe Digital Editions* application

NOTE You will be prompted to activate new Device, when it's connected to PC for the first time. If the Device is not activated, it will be impossible to copy a book from PC to Device using Adobe Digital Editions. If you have previously used registration data in a firmware version earlier than 2.0.4 in the Device for opening protected books then, when upgrading the software version, you will have to enter registration data of www.adobe.com once more to open such books again. The Adobe Digital Edition authorization can be deleted in the section *Settings > Maintenance > Delete the ADE authorization*.

2. Select the *Go to library view* icon
3. Click *All items*
4. Find the desired book and copy it to your Device. To open it, use your registration data at www.adobe.com.

Book Borrowing

A registered user can borrow a book from online bookstores (e.g. www.adobe.com). A borrowed book will be placed in the *Borrowed books* section of the user's account and becomes available for reading. The book can be opened on a PC or the Device using the account data on the www.adobe.com site.

Every time you open a book the Device will prompt you to return book. After the borrowing period or after reading the book completely it becomes unavailable for reading.

READING MODE

The Device supports next book formats: FB2, FB2.zip, TXT, PDF, RTF, HTML, MOBI.PRC, CHM, DJVU, DOC, DOCX, EPUB, TCR.

If you was reading the book already, it will be opened on a page you finished reading.

Status bar in reading mode displays current page number/total page count, book title, read percentage, current time and battery charge. To turn pages, press **Forward/Backward** hardware buttons. Continuous press of these buttons will turn 10 pages forward or backward, respectively. **Menu** button opens book's table of contents (if available).

If a book contains external links, cross-references or footnotes, you can switch to a links mode by

continuous **Down** key press (if a current page contain links, otherwise you'll get a message about links absence). A cursor will appear in the right top corner. Select the link to follow using **Up** and **Down** keys and press **OK** to go to a link. If a link is external one, the browser will open it; to return to reading press **Return** key. If a link is a footnote, you will be redirected to it; to return to an original place in a book, enter the links mode again and select the footnote's number or symbol.

Reader menu by default is brought up by **OK** button press. Menu functions depend on the reader program.

Search



Search mode works only in books containing text layer. To search text through the book enter it using the on-screen keyboard. Found text would be highlighted, and you can switch between found instances using **Left/Right** navigation keys. To exit search mode press **OK**.

NOTE Search mode is not available for DJVU books.

Contents



Opens structured content of the book if present, otherwise you'll get message about missing table of contents. Active contents displays table of contents, bookmarks and notes you've made during reading. Use navigation keys to move across the table, continuous press of **OK** button expands/collapses subsection branch.

You can tune appearance of contents in context menu. There you can rename or edit note, expand or collapse all subsections branches and set up items to display in contents (under the *Settings* section): contents, bookmarks, markers, comments, pens or snapshots. Please, note that you can edit notes and bookmarks you've made while reading on the Device only.

Voice



Text-to-Speech (TTS) software is designed to transform text into speech. After you turn on this feature, a progress bar will appear in a top left corner. Press **OK** to start playback. Progress bar indicates a fragment read currently, pages are turned automatically as you listen.

To control TTS playback you can use either TTS menu brought up on **OK** keypress, or hardware buttons:

- Volume control: **Volume +/-, Up/Down**
- Pause/play: **Left**
- Exit TTS mode: **Return.**

Initially there are 4 TTS packages are installed on the Device.

NOTE Operating system of the Device can use only 4 TTS packages. To install the new one you need to uninstall one of existing. To proceed, go to *Configuration > Maintenance > Removing Packages*, select packages to delete, exit the section by pressing **Back** and confirm deletion

To install TTS package, do the following:

- Download package (.pbi extension file) from website <http://pocketbook-int.com/download/tts/>
- Connect the Device to PC and copy TTS package file to applications folder of the internal storage
- Open Main panel *Applications* section, run package file and confirm installation
- After install open *Configuration > Speech Synthesis > Language and Voice* and select package to use. Also in this section you can set up speed and tone of speech.

Bookmarks



Adds current page to bookmarks. After adding a page to bookmarks in a right top corner a dog ear mark will appear.

All the bookmarks will be displayed in contents. To delete bookmark, select the correspondent menu item again.

NOTE Bookmarks are not available for DjVu books

Open Page



Opens dialog window, where you can enter page number to go to or select one of the recent transitions.

Settings



For FB2, TXT, RTF, HTML, PRC and CHM books you can set up the most convenient reading settings: font, font size (you can adjust font size with **Up/Down** navigation keys), spacing, page margins width, or encoding (for txt and html books). FB2 books has two refresh modes: Best Quality or High Speed (default).

Zoom



Pdf and DjVu books has Zoom menu item instead of Settings.

Next zooming modes are available:

- 4, 9 page – preview mode, several pages on a screen
- Fit width – scaling page to the screen width
- Usual mode – one page scaling
- Columns – for reading books with columns.

To navigate the page use navigation buttons. A page will be turned after bottom edge of the sheet reached






- Reflow – in this mode text is formatted to display completely on a page. You can change font size with **Up** and **Down** keys. Some images and tables may not display in this mode. Reflow mode is supported for pdf books only.

To display correctly documents with right-to-left writing, check the corresponding box.

Dictionary



Single-word translation. By default cursor highlights the word to translate and dictionary looks for translation automatically. **OK** button press switches to a toolbar:

-  – exit dictionary
-  – toggle dictionary to list view
-  – toggle to single-word view
-  – brings up on-screen keyboard to type in the word to translate
-  – change dictionary.

Rotate



Fixes the screen orientation: select the suitable one with navigation keys or press **OK** for automatic accelerometer-based page rotation.

ATTENTION! Screen rotation changes navigation keys mapping! For example, after 90° screen rotation pages will be turned with **Up/Down** keys.

Notes




Notes allows you to save favorite book fragments and make handwritten records directly in the text. All the notes will be displayed in book's table of contents.

NOTE Handwritten notes are not available for DjVu books.

After you will enter Notes, a tooltip window will appear.

Tools:

 **Marker** – use to highlight text: touch the beginning of the fragment and slide to the end. If you select area, which already contains marker, they will be merged. Continuous stylus touch opens context menu, where you can add text comment or remove marker. If the selection already has comment, you will be able to edit it by selecting *Show Comment* option.



Pencil – use to draw notes in the text.



Eraser – clears markers and pencils. Slide the stylus across the area with note to erase it.



Screenshot – saves selected text fragment as a picture.



Table of Contents – opens the book's Table of Contents.



Help – opens a window with instructions on using the tools.



Close notes mode.

All notes are visible from Main Menu (section *Notes*). Press **OK** on the note being viewed to get to the exact place in the book where this note was created.

USING THE STYLUS

You can use the stylus while reading books.

Turning Pages

To turn page forward, slide the stylus from the right to the left on a bottom edge of screen, similar to turn pages in paper book. To go one page back slide stylus from the left to the right, respectively.

Zooming

You can also zoom using the stylus: to increase slide the stylus bottom-up on the right edge of the screen; to decrease, respectively, slide the stylus down. Zooming mode depends on chosen earlier.

Menu

To call reader's menu, touch the center of the screen with the stylus.

Bookmarks

Touch with the stylus the right top corner of the screen to create bookmark. To remove bookmark, touch the bookmark sign.

Table of Contents

To expand/collapse the hidden branches of structured table of contents, touch +/- sign with the stylus, respectively. Continuous touch on the TOC's item opens the context menu.

Following Links

To follow a link, just touch it with the stylus.

Software

IN THIS CHAPTER...

You will learn about additional software features of the Device.

FAVORITES



After selecting this section Library opens, displaying the books, added to Favorites.

NOTES



In this section you can view all the notes made during reading. After you select a note, the table of contents of the book, where it was made, will open. After opening the note, you will be able to edit it as described above.

APPLICATIONS



This section contains games and additional software.

BookLand

Opens the web browser on the BookLand online bookstore web-page. About web browser see below.

Calculator

You can also launch this application via *Calculator* widget. The calculator provides a wide range of mathematical operations, such as: numerical notations, as well as logical, constant, and trigonometric functions. The engineering calculator can be used to perform extremely complicated calculations.

Chess

Classic chess game. You can play against either the computer or another person.

Klondike

Classic solitaire

Clock

This application turns your Device to a useful digital bracket clock.

Sudoku

Popular Japanese puzzle.

Snake

The game.

PocketNews

An application for adding and reading RSS feeds.

To add RSS news feeds, open RSS setup. Select the *Add RSS feed* option. Enter the feed address using the on-screen keyboard.

To delete the feed, select it, open the context menu (by pressing the **Menu** button) and select the *Delete* command.

To edit the feed, select it, open the context menu (by pressing the **Menu** button) and select *Edit* command. Edit the feed address using the on-screen keyboard.

To update feed, select *Update* in the application menu. When updating RSS feeds, updated content is added to the file with .hrss extension, and the file will be accessible for reading after updating. The news downloading status is displayed while updating. After the update file is available for reading off-line using the browser.

To read latest feeds, select *Read the latest news* option in the application's menu. The latest downloaded RSS feed updates open in browser

News Archive: by selecting this option you can choose to read the previously stored updating RSS feeds.

Browser

Application for viewing web-pages. After opening the browser, you will be asked to connect to one of the available networks.


To navigate the browser use the stylus, to enter web-addresses and other text information – on-screen keyboard.


Scribble


Application for drawing. To use this application your touch screen must be precisely calibrated. You must draw on the screen with the stylus held perpendicular to the screen surface.


ATTENTION You can only draw with the stylus on your device when the touchscreen is active (the device is in normal mode marked by green LED light).

To select the drawing tool, use the application control panel:

 Text: select the position and size of the text box. Text is entered with the on-screen keyboard

 Pencil: a tool for drawing thin lines

 Marker: a tool for drawing thick lines

 Eraser: a tool for removing lines and text



Back: cancel the last operation



Current drawing/total number of drawings:
change the current drawing



New: start a new drawing



Delete drawing



Exit application.

To save a picture, click the *New Picture* icon. The current picture will be saved to the *My Pictures* folder in the root folder of the Device.

DICTIONARY



Enter a word from on-screen keyboard, and the application will find its translation. To hide/show the on-screen keyboard, press **OK** button. To change dictionary, press **Menu** button or touch the icon at the right top corner with the stylus, select the dictionary from the list and press **OK**.

Installation of Free *.dic Dictionaries

1. Open on your PC www.pocketbook-int.com website and select your language
2. Find your Device model under Support section
3. Under Dictionaries subsection find needed dictionary and download it
4. Unpack the archive to your PC
5. Connect the Device to PC and copy dictionary (*.dic files) to the Device into folder *system > dictionaries*.

MUSIC



This Main Menu item is designed for you to listen to your favorite MP3 music.

ATTENTION Music player is the most energy-consuming application. If the music player is enabled, a note icon is displayed at the status bar.

To listen to music on your Device:

- Download MP3 audio files into the Device memory or internal microSD-card
- Open *Music* section from Main Menu. The application will automatically scan memory for MP3 files
- Select a track to play at first and press **OK**.

The top part of the player displays the name of the file that is being played back and the playlist.

The bottom part of the player displays the playback control panel.

Player Controls

- **OK** button – Play/Pause
- **Left/Right** buttons:
 - Short press – next/previous track in the playlist
 - Long press – fast-forward/rewind track
- **Menu** button – change playback mode
 - One track
 - All tracks in order
 - Shuffle.
- **Forward/Backward** and **Volume +/-** – adjust volume
- Press **Return** to exit the player.

PHOTO



In this mode the *Photo* folder opens. You can view image in other folders by going up to one level and selecting a folder.

Section menu (hardware **Menu** button) allows sorting files by name or by creation date, adjusting section appearance (short/full/thumbnails) and displaying files depending on their location (all memory/internal storage/external micro SD card).

File context menu allows opening, renaming, moving to folder, deleting or sending file via Bluetooth.

Use the navigation keys or **Forward/Backward** keys to turn the images. In addition, you can launch a slide-show by selecting the corresponding context menu item.

SEARCH



After you open this Main menu section, the on-screen keyboard will appear. Enter text in file name, title or author name, and application will open found books list.

Using the context menu of the list, you will be able to open a book, view its info, mark as read/unread, add to favorites; send book via Bluetooth, rename, move to another folder, copy/move to SD card (if the file is stored on the internal storage) or delete book; configure appearance and sorting of the list and go to file location.

Network Connections

IN THIS CHAPTER...

You will learn how to preconfigure network connections to go online or communicate with other devices.

To configure connection, enter the section *Configuration > Connectivity*.

Enter the Device name, visible to other network equipment, under the *Device name* section. To select network access mode, press *Access to network* and choose *on*, *off*, or *Ask user*. Under *Preferred connection* section select one of the preconfigured connections to be used by default.

BLUETOOTH

The access by Bluetooth option serves to transfer files between devices via the wireless network. The Device visibility is set in *Bluetooth connections* section (off/hidden/visible). Bluetooth connection is also used to access the Internet via a cell phone.

1. Select *Configuration > Connectivity > Bluetooth connections > Bluetooth GPRS*. Select the connection you want to configure. By default, non-preset connections are named *Connection No...*

2. Press *Connection Name* and enter name from the on-screen keyboard appeared

3. Press *Connect via*. The Device will search for available Bluetooth devices. Select the device to connect to from the list

4. Set an access point name (APN), username and password under the corresponding sections

NOTE APN, username and password can be provided by your mobile operator. Your cell phone (or other device) should have preconfigured GPRS connection

5. Open *Disconnect when idle (min)* and select a value from the drop-down list

6. Preset a proxy server (if necessary): select Proxy configuration and enter connection parameters (proxy server name, port, username and password) from the on-screen keyboard

7. Press *Test connection* to check network configuration. The message *Connecting* will appear. If connection fails you can look through the event log.

Connecting Bluetooth Audio Device

You can connect a Bluetooth audio device to listen to the music or Text-to-Speech.

NOTE You can connect a Bluetooth audio device that uses the A2DP Bluetooth-profile. Conventional Bluetooth headset for mobile phones works using the headset and hands free profile.

To connect an A2DP audio device, create a connection profile:

1. Select *Configuration > Connectivity > Bluetooth connections > Bluetooth Audio Devices*. Select the connection you want to configure. By default, non-preset connections are named *Connection No...*

2. Press *Connection Name* and enter name from the on-screen keyboard appeared



3. Press *Connect via*. The Device will search for available Bluetooth devices. Select the device to connect to from the list

NOTE A list of all Bluetooth devices that are compatible with your Device will be displayed (all nearby Bluetooth devices that are enabled will be displayed, not only A2DP).


4. Open *Disconnect when idle (min)* and select a value from the drop-down list

5. To link to an A2DP audio device, you must enable the connection by pressing the *Turn on?* option.

Upon completing the connection it will be necessary to enter a Bluetooth PIN, it should be provided by the audio device manufacturer. PIN is required for the first connection only.

After the connection  and  icons will appear in status bar.

NOTE Playback control with A2DP device (e.g. play/pause, next/previous track device buttons) is not supported recently.

To disconnect audio device, return to the profile configuration and select off in Turn on? section. Alternatively, you can touch  icon with stylus and select Disconnect in dialog window appeared (not applicable for 602 and 902 models).

Connecting Bluetooth Keyboard

You can connect a Bluetooth keyboard to simplify navigation and entering text.

1. Select *Configuration* > *Connectivity* > *Bluetooth connections* > *Bluetooth Keyboard*. Select the connection you want to configure. By default, non-preset connections are named *Connection No...*

2. Press *Connection Name* and enter name from the on-screen keyboard appeared

3. Press *Connect via*. The Device will search for available Bluetooth devices. Select the device to connect to from the list

NOTE A list of all Bluetooth devices that are compatible with your Device will be displayed (all nearby Bluetooth devices that are enabled will be displayed, not only keyboard).

4. Open *Disconnect when idle (min)* and select a value from the drop-down list

5. To link to a keyboard, enable the connection by pressing the *Turn on?* option.

Upon completing the connection enter PIN from the on-screen keyboard and re-type it on the Bluetooth one. PIN is required for the first connection only.

After the connection  and **Kb** icons will appear in status bar.

To disconnect audio device, return to the profile configuration and select off in Turn on? section. Alternatively, you can touch **Kb** icon with stylus and select Disconnect in dialog window appeared (not applicable for 602 and 902 models).

CONFIGURING WI-FI CONNECTION

1. Select *Configuration > Connectivity > Bluetooth connections > Bluetooth Audio Devices*. Select the connection you want to configure. By default, non-preset connections are named *Connection No...*
2. Press *Network name (SSID)* and select the access point from the list
3. Connection name will turn to the network name. If you want to rename the connection, press *Connection Name* and enter name from the on-screen keyboard appeared
4. Set encryption type from the *Security* drop-down list

NOTE After selecting WEP encryption it's necessary to select WEP Authentication type: either Open System or Shared Key. System cannot recognize authentication method automatically.

Encryption is not set by default. When selecting the type of encryption, the box for entering an access code will be displayed

NOTE You can use up to 64 characters in your password for WEP-PSK encoding.

5. Open *Disconnect when idle (min)* and select a value from the drop-down list

6. Select *Network Settings*, and press **OK** on *IP-address Configuration* and select from the drop-down menu:

- a) DHCP (if a DHCP server is configured in the network)
- b) Manual – set the network parameters manually

7. Preset a proxy server (if necessary): select *Proxy configuration* and enter connection parameters (proxy server name, port, username and password) from the on-screen keyboard

8. Press *Test connection* to check network configuration. The message *Connecting* will appear. If connection fails you can look through the event log.

NOTE You can use Wi-Fi to connect to the Internet. You cannot transfer files over the Wi-Fi network. The Device can connect to a Wi-Fi access point with a hidden SSID network name. The Device can connect to a Wi-Fi access point with enabled filtering of MAC addresses.

CLOSING NETWORK CONNECTIONS

To terminate all the network connections, go to *Configuration > Connectivity > Access to network* and set this parameter to *off*.

Configuration

IN THIS CHAPTER...

You will learn how configure the interface and software features of the Device for the most comfortable usage. Changes you've made in Configuration will be applied after you will exit this section.

Registration

This menu item is displayed only if the Device is not registered at BookLand online bookstore (www.bookland.net). The Device will be registered automatically during the first Internet connection.

NOTE During the registration only serial number of the Device is sent. Registration is related to the particular Device only and is not related to BookLand account.

About device

The following information about Device will be displayed: model, serial number, software version, RAM size, E-ink parameters, Wi-Fi and Bluetooth MAC addresses, total and free memory on the internal storage and on SD-card.

After pressing *More...* button the information about software will be displayed.

Language

Select the Device's interface language.

Keyboard

Under this section you can add up to 3 keyboard layouts and set the keyboard layout switching for Bluetooth keyboard.

User Profiles

Here you can configure up to 6 user profiles (5 can be stored in the internal storage and 1 – on micro SD card). Each profile stores individual books' status, last opened books, bookmarks, notes, favorites and preconfigured network connections.

To add new profile, open the corresponding item. You will be suggested to set destination (local memory or SD card) and to enter the name from on-screen keyboard. After this current above-mentioned parameters will be stored at this profile.

To active profile open the profile you need. In profile context menu you can change avatar, duplicate profile to a new one (to the SD card or internal storage either), rename or delete profile.

Appearance

Here you can select the appearance parameters:

- *Theme*
 - *Interface font*. If you'd like to use your own font, copy its files to the *system/fonts* internal storage folder
 - *Main menu* – select Main menu elements layout
 - *Screen orientation* – select the most suitable for you or select *auto* for accelerometer-based
- NOTE** The navigation key map may change as you change orientation from portrait to landscape.
- *Boot logo* – startup image. If you'd like use your own, copy it to *system/logo* internal storage folder
 - *Power-off logo* – the image will be displayed when the Device is off
 - *Text rendering* – good quality or not antialiased (faster)

- *Full page update* – select the amount of page turned before the screen will be updated completely. *Always* provides the best quality, but consumes the most power
- *Warn if the file is too large* – if this setting is on, the Device will show a notification when you try to open file larger than 20 MB.

Key mapping

In this section you can remap hardware keys actions in general, for reading pdf and DjVu books, or for reading other format books. To change key action, select it from the list, press **OK** and choose action from the list.

Clock

In this section you will be able to set date, time, time zone and clock format. *Update clock* item defines how often the clock at status bar will be updated during reading: on page turn, every time or

disabled at all. Also you can set idle time before locking keyboard and automatic power off.

Open at Startup

Here you can set either open last opened book or main menu.

Connectivity

In this section you can set paramteres needed for network and USB connections.

- *Device name* – set the Device name for other network equipment
- *Access to network* – define, if the network connection is on, off or ask user, when it's necessary (e.g. for browser)
- *Preffered connection* – the connection will be used by default
- *Bluetooth access* – turn on/off Bluetooth module, and set visisbility for other Bluetooth devices
- *Bluetooth connections*

- *Wireless connections*
- *CDMA/3G connections* (903 and 603 models only)
 - *Change PIN for SIM card*
 - *Turn off PIN request*
- Pre-configure wireless connections. See more in *Network Connections* chapter.
- *USB mode* – set how the Device handles USB connection: PC link, charge or ask user.

Speech Synthesis

In this section you can set parameters for TTS:

- *Language and voice* – select the TTS package
- *Speed of Speech*
- *Tone*.

Maintenance

This section allows you to configure system parameters.

- *Update software* – the Device will search for updates in the following order: internal storage, microSD card (if installed) and Internet.

- *Removing packages* – remove dictionaries and TTS packages. Check items to uninstall, press **Back** to exit the section and confirm removal in dialog window

- *Configure dictionaries* – under this section you can uncheck dictionaries you don't want to be displayed in the list during the translation or in *Dictionary* application

- *Format internal memory* – this action will erase **all** data, except system files.

CAUTION! If you need to erase all data on the Device, use this feature only, don't try to format the Device internal memory via PC.

- *Clean state* – the Device state will be reset to factory default settings, erasing user settings. Other data (e.g. books, music, photos) won't be lost
- *Update interval* – set the interval to check for updates
- *Calibrate g-sensor* – put the Device on a flat horizontal surface and press any button
- *Remove ADE authorization*.

Library

This section is intended for optimization of Library databased.

- *Library Data Update* – set the parameters for Library database update:
 - *Off* – database won't be updated
 - *Once* – database will be updated after exit from *Configuration* section, the parameter will be set to *Off* after update
 - *Automatically* – database would be update after each Library opening and copying/

removal of books (including microSD card change).

- *Optimize Database* – remove old database entries. To run optimization set the parameter to *Once* and exit *Configuration*. The parameter will be set to *Off* after optimization.

Protect configurations by password

In this section you can protect your setting by password. Select *Set password* section and type the password from on-screen keyboard. Now each time you try to enter *Configuration* section, you will be asked to enter the password. You can remove or change password by selecting the corresponding item. To proceed, you will be asked to enter the password once more.

Firmware Update

WARNING! Firmware Update is a responsible operation, during which management software of e-book will be changed. In case of improper execution control program may be damaged and will require treatment in the service center. Please perform the upgrade procedure in accordance with the instructions below.

There are 2 ways to update the Device firmware.

Automatic Update

To start automatic software update select *Settings > Maintenance > Update software*.

The Device will begin to check available update sources in the following order:

- Internal memory
- Micro SD card
- Internet.

If default Internet connection is not set, the Device will ask to connect to one of available wireless networks.

Also you can set period of automatic updates check (*Settings > Maintenance > Update interval*). In this case, the Device will use Wi-Fi connection only.

Manual Update

1. Open site www.pocketbook-int.com. Select your country
2. Click the *Support* button on top menu. Select hardware model of your Device
3. Download the Firmware to your PC
4. Unpack the content of the archive, file SWUP-DATE.BIN and copy it to the root folder of MicroSD-Card or internal Device storage
5. Switch off PocketBook Pro by pressing button **On/Off**

6. Switch on PocketBook Pro by pressing **On/Off**

7. During boot press and hold both **Backward** and **Forward** buttons simultaneously until the message *Firmware update...* is displayed on the screen

8. Follow the on-screen instructions

9. Wait for the message on the screen: *Please connect power cable*, and then connect USB cable to PocketBook Pro

Wait until you *Press central Key...* on the screen

NOTE: You can check your Firmware version in *Main menu*
> *Configuration* > *About device*

NOTE If the firmware file is located in the Device's root folder, it will have a higher priority in comparison with the file stored on the SD card during the update process.

Troubleshooting

Message	Reason	Correction Method
<i>No upgrade image found</i>	file SWUPDATE.BIN cannot be found on the Micro SD card. Make sure the file is in the root folder of the card.	Try to format your Micro SD card (make a backup copies of all its content prior to formatting) and copy the file to the root of the empty card. If this error persists, use another card.
<i>Upgrade image is corrupted or Image is empty</i>	SWUPDATE.BIN file is damaged or there is no space available on the Micro SD card.	Delete some files from your card and copy SWUPDATE.BIN file on it one more time. Repeat the download from www.pocketbook-int.com . If this error repeats, use other card.
<i>File read error</i>	Incorrect Micro SD card	Try to use another MicroSD card
<i>Error. A different firmware version is installed on the device</i>	A firmware file of an older version is stored in the device internal memory.	Delete the old version of the firmware file from the Device's internal memory root folder

Troubleshooting

Malfunction	Possible Reason	Solution
Device does not turn on or turns on but only the logo is loaded	Battery is low	Charge the battery
A book does not open - the message <i>Book is probably damaged or protected</i> appears, or nothing happens at all	The book is damaged	If the book was downloaded from the online store try to re-load it again. If the file opens on your PC, but does not open on the Device, save the book in another format.
Html book opens but is displayed incorrectly. For example, there are empty pages, some part of the text is missing etc.	HTML-files contain non-text elements (frames, JAVA-scripts, flash-elements)	Save the page in TXT format

Malfunciton	Possible Reason	Solution
Book opens but various symbols, question marks etc. Are displayed instead of letters	Incorrect encoding	Switch to reading mode, select <i>Settings</i> and change encoding
No response when you press any key	Sometimes (e.g., when downloading damaged or too large books) the Device may freeze	Close the frozen application by pressing the Return key for 1–2 sec and delete task from task list. If this doesn't help, press Reset on the rear panel to reload your device.
After connection to PC disks are not displayed in Explorer	Your Device is in the battery charging mode.	Check USB mode in <i>Configuration</i> Main Menu item. Set <i>Connection to PC</i> or <i>Ask at Connection</i>
	No signal in connection cable	Check USB cable condition and its proper connection to connector. Try to connect the USB-cable to another connector

Malfunciton	Possible Reason	Solution
Bookmarks, settings and current position in file cannot be saved	File system damaged	Connect the device to a PC and check disks. To proceed, open <i>My Computer</i> , right-click on the selected disk and select <i>Properties >Service > Check Disk</i>
	Internal memory is full	Delete books, images and/or music files that you do not need
Battery discharges too fast	Disabled automatic turning off	<i>Configuration > Clock</i> in Main Menu. Select automatic turn off time in <i>Auto Turn Off in...</i> item
	Music player is in background mode. The music player is one of the most energy-consuming application. A tone icon in the right lower corner indicates that the player is active	Turn off the player

Customer Support

For detailed information about service centers in your country please use contacts below:

Web site: <http://www.pocketbook-int.com/support/>

E-mail: service@pocketbook-int.com

Telephone:

<i>Deutschland</i>	0-800-183-39-70
<i>USA</i>	1-877-326-01-96
<i>Российская Федерация</i>	8-800-700-00-34
<i>Україна</i>	0-800-304-800
<i>Қазақстан</i>	8-800-333-35-13
<i>Беларусь</i>	8-820-0011-02-62

Compliance with International Standards

The EUT should be supplied by USB port from complied Limited Power Source of personal computer or notebook.

The EUT should be supplied by Adapter from complied Limited Power Source.

AC Power

Manufacturer: FLEET

Model: FCC050100U

Rated output voltage: DC 5V 1A

CE0984 ⓘ This equipment is marked with the 0984 symbol and can be used throughout the European community.

This indicates compliance with the R&TTE Directive 1999/5/EC and meets the relevant parts of following technical specifications:

- **EN 300 328 V1.7.1** – Electromagnetic compatibility and Radio spectrum Matters (ERM); Wide-band Transmission Systems; Data transport equipment operating in the 2.4 GHz ISM band and using wide band modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive

- **EN 301 489-1 V1.8.1** – Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

- **ETSI EN 301 489-7 V1.2.1** Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 7: Specific conditions for mobile and portable radio and ancillary

equipment of digital cellular radio telecommunications systems (GSM and DCS)

- **EN 301 489-17 V2.1.1** – Electromagnetic compatibility and Radio spectrum Matters (ERM); EMC standard for radio equipment and services; Part 17: Specific conditions for 2.4 GHz wideband transmission systems and 5 GHz high performance WLAN equipment

- **ETSI EN 301 489-24 V1.4.1** – Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 24: Specific conditions for IMT-2000 CDMA Direct Spread (UTRA) for Mobile and portable (UE) radio and ancillary equipment

- **ETSI EN 301 511 V9.0.2** – Global System for Mobile communications (GSM); Harmonized EN for mobile stations in the GSM 900 and GSM 1 800 bands covering essential requirements under article 3.2 of the R&TTE directive (1999/5/EC)

- **ETSI EN 301 908-1 V3.2.1** – Electromagnetic compatibility and Radio spectrum Matters (ERM); Base Stations (BS), Repeaters and User Equipment (UE) for IMT-2000 Third-Generation cellular networks; Part 1: Harmonized EN for IMT-2000, introduction and common requirements, covering essential requirements of article 3.2 of the R&TTE Directive

- **EN60950-1:2006+A11:2009** – Information technology equipment – Safety – Part 1: General requirements

- **EN 62311: 2008** – Assessment of electronic and electrical equipment related to human exposure restrictions for electromagnetic fields (0 Hz-300 GHz)

France – 2.4GHz for Metropolitan France.

In all Metropolitan departments, wireless LAN frequencies can be used under the following conditions, either for public or private use:

- Indoor use: maximum power (EIRP*) of 100 mW for the entire 2400-2483.5 MHz frequency band
- Outdoor use: maximum power (EIRP*) of 100 mW for the 2400-2454 MHz band and with maximum power (EIRP*) of 10 mW for the 2454-2483 MHz band.

IMPORTANT: Changes or modifications to this product not authorized could void the EMC and wireless compliance and negate your authority to operate the product. This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment

off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth in an uncontrolled environment. This transmitter must not be colocated or operating in conjunction with any other antenna or transmitter.

The device was tested and complies to measurement standards and procedures specified in FCC OET Bulletin 65, Supplement C

Certification information (SAR)

The device meets guidelines for exposure to radio waves.

Your device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of

an operating device can be below the maximum value because the device is designed to use only the power required to reach the network.

The highest SAR value under the ICNIRP

EU 10g SAR Limit	Highest 10g SAR Value
2 W/kg	0.391 W/kg

This equipment complies with the European Council Recommendation of 12 July 1999 on the Limitation of

Exposure of the General Public to Electromagnetic Fields [1999/519/EC].

Assembled in China

Product life is 24 months from the purchase date.

Designed by Pocketbook Int. Room 2201, 22/F.1
Duddell str. Central, Hong Kong



Contains Reader® Mobile
technology by Adobe Systems
Incorporated