

PocketBook

Obreezy

User Manual
PocketBook Basic New

Table of Contents

SAFETY PRECAUTIONS.....	5
Storage, Carriage and Usage Conditions	5
Maintenance	6
RF Safety	8
Utilization	8
APPEARANCE.....	10
Front View	10
Side View	11
TECHNICAL CHARACTERISTICS.....	12
GETTING STARTED	13
Charging Battery	13
Power Management	14
Loading Files	15
Navigation	16

Working with On-Screen Keyboard	17
Installing additional dictionaries	19
MAIN MENU.....	20
Recent Events	22
Library	22
Notes	25
Applications	26
Calculator	26
Calendar & Clock	26
Chess	27
Dictionary	27
Klondike	28
Photo	28
Snake	28
Sudoku	28
Status Bar	29
READING BOOKS	30
Turning Pages	31

Following References	31
Changing Font Size	31
Reading Menu	32
Contents	32
Go to Page	34
Search	35
Bookmarks	35
Settings	36
Mode	37
Dictionary	38
Rotate	38
Making Notes	39
Closing a Book	40
SETTINGS.....	41
About device	41
Language	42
Keyboard	42
Appearance	42
Key mapping	43

Clock	44
Open at Startup	44
USB Mode	44
Accounts and Synchronization	44
Maintenance	45
Library	46
FIRMWARE UPDATE.....	47
Troubleshooting	49
TROUBLESHOOTING	50
CUSTOMER SUPPORT.....	52
COMPLIANCE WITH INTERNATIONAL	
STANDARDS	53

Safety Precautions

Before start working with the Device, please, read this section carefully. Following these instructions will help you ensure your safety and extend service life of the Device.

Storage, Carriage and Usage Conditions

Device operating temperature range is 0°C to 40°C, so don't expose the Device to excessively high or low temperatures. Never leave cables near heat sources. Heated cables or their insulation may become deformed or damaged, which could lead to fire or electric shock.

Try to avoid next impacts:

- direct sunlight
- direct flame or smoke (cigarette, lighter, open fire etc.)
- exposure to liquids or damp (do not use the Device in the rain, in the street at higher humidity, near bodies of water etc.)

- penetration of liquids or moisture
- exposure to strong electromagnetic fields, electrostatic charges and artificial sources of UV electromagnetic radiation
- excessive mechanical pressure on the screen, connectors and keys of the Device.

Do not leave the Device for a long time in poorly ventilated environment, e.g. in a car or in closed tight boxes/ packaging.

Neither drop nor try to bend the Device. Protect the screen from objects that may scratch or damage it. To ensure adequate protection of the screen, we recommend storing the Device in a protective and/or hard cover.

Keep away from children.

Maintenance

Do not disassemble or modify the book reader.

Do not use the Device with a damaged battery, charger (broken case, poor contact, broken feed cable) or SD card. If the battery is damaged (cracked case, leakage of electrolyte, off-shape etc.) it should be replaced by the authorized personnel. Usage of home-made or modified batteries may cause an explosion and/or damage the Device.

Do not use organic or inorganic solvents (e.g. benzoyl etc.) to clean the screen/case. Use a soft cloth to remove dust from the Device's surface. Apply a few drops of distilled water to remove dirt.

Up to five faulty pixels are acceptable in the screen and do not constitute a warrantable defect of the screen.

By the end of product guarantee term, please contact the nearest authorized service facility for examination on the subject of security is maintained.

For detailed information about service centres in your region please visit the official website of PocketBook International: <http://www.pocketbook-int.com>.

RF Safety

The Device receives and transmits radio frequencies and may interfere with radio communications and other electronic equipment. If you use personal medical Devices (e.g. a pacemaker or hearing aid) please contact your doctor or the manufacturer to learn whether or not such medical devices are protected against external RF signals.

Do not use wireless communication in places where it is prohibited, e.g. onboard a plane and in hospitals – this may affect airborne avionics or medical equipment.

Utilization



Incorrect disposal of this Device may have adverse impacts on the environment and public health. To prevent such consequences follow

the device-specific disposal requirements. Recycling of these materials helps preserve natural resources. For more information regarding recycling issues please contact local municipal authorities, your domestic waste collection service, store where you purchased the Device, or the authorized service centre.

Disposal of electric and electronic components (the Directive is applicable to the EU and other European countries where separate waste disposal systems exist). In other countries dispose batteries accordingly to local laws.

Do not destroy the battery by burning it to avoid the danger of explosion!

Appearance

FRONT VIEW

1. **Backward** – in reading mode turns page backward; in navigation mode – goes to the previous menu or page of the list

2. **Left**

 
3. **Down**

4. **Up**

5. **Right**

6. **Forward** – turns page forward

7. **OK** – short press opens an element (e.g. book or menu item), continuous one – opens item's context menu (if available)

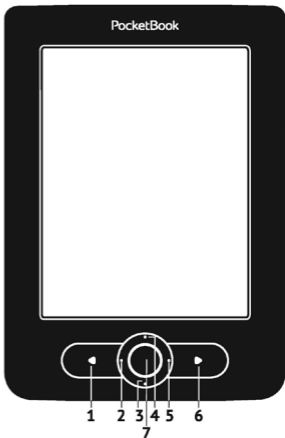

SIDE VIEW



8. Micro-USB port – for connecting to computer or charger (charger may be optional)

9. MicroSD card slot – for external memory card (Micro SD card may be optional)

10. Reset – reboots the Device

11. On/Off (power) button – continuous pressing turns the Device on/off, short one – locks keyboard.

12. LED Indicator – green light – the Device is in action (pages are loading). During battery charging the indicator is on, when the battery is fully charged, the light turns off.

NOTE You can configure key mapping to your own in *Settings > Key mapping*. Navigation and page turning buttons mapping depends on screen orientation.

Technical Characteristics

Display	6" E Ink® Vizplex 600×800, 166 dpi, B&W
CPU	800 MHz
RAM	128MB
Storage	2GB *
Operating system	Linux®
Communications	USB 2.0
Memory slot	MicroSD/SDHC (up to 32 GB)
Battery	Li-Polymer, 3.7 V, 1000 mAh **
Book formats	PDF, EPUB (including DRM-protected); TXT, FB2, FB2.zip, RTF, HTM, HTML, CHM, DJVU, DOC, DOCX, RTF, TCR, PRC
Image formats	JPEG, BMP, PNG, TIFF
Dimensions	122.6×176.38×9.7 mm
Weight	180 g

* The actual available internal storage size may vary depending on the software configuration of your device.

** Battery life and values mentioned above might vary depending on usage mode, connectivity and settings.

Getting Started

In this chapter you will learn how to prepare the Device to work and about its main control features.

CHARGING BATTERY

To extend battery lifetime, it's recommended to charge the Device for the first time from 8 to 12 hours in the off state. You can charge the battery from PC using USB-cable or from the power line using a charger (optional).

To charge the battery for the first time, do the following:

- Connect the Device to a computer or charger with USB-cable. Indicator will start flashing as soon, as the charging starts
- When the battery is fully charged, indicator turns off. Now you can disconnect the Device and turn it on for the first use.

If the Device is on when you connect the cable to PC, a dialog window asking to select action – *PC link* or *Charge* – will appear. Charging will start if corresponding mode is selected only.

POWER MANAGEMENT

To turn on the Device, press and hold **On/Off** button for a few seconds until startup logo will appear. When the Device is ready to operate, an image will be changed to Main menu or last opened book, depending on settings (*Settings > At startup, open*).

To turn off the Device, press **On/Off** button continuously until the Device goes off. If you will press power button shortly, the keypad of the Device will be locked and the lock sign will appear in a center of the screen. To unlock the keypad, press **On/Off** button again.

In addition, you can set automatic key lock or power off: go to *Settings > Clock > Lock keyboard after* or *Power off after*, respectively, and set the idle time before locking keyboard or power off.

In case if your Device ‘freezes’ (don’t respond to keys presses and perform no actions for 2-3 minutes), you can restart it by pressing **Reset** button on side panel with some thin item (e.g. unbent staple).

CAUTION! Don’t use sharp items, such as needles, to press **Reset** button to avoid Device case damage! Don’t use this feature frequently, because it affects the electronic components of the Device.

LOADING FILES

Connect the Device to the PC using micro-USB cable.

NOTE The Device should be kept on while transferring files.

You will be prompted to select USB mode: *PC Link* or *Charge* either. Select *PC Link*. Operating system of computer will detect Device's storage as removable disk (if SD card installed – as two ones). Now you can copy files to the Device or SD card using Explorer or other file manager.

ATTENTION After copying files safely remove the Device before disconnect the cable!

NAVIGATION

Use navigation buttons **Up, Down, Left, Right** to select required item (e.g. book or menu item).

ATTENTION! If you change screen orientation, navigation and page turning keys mapping will be also changed accordingly to the side you've changed orientation to.

Press **OK** button shortly to open selected item. Continuous **OK** press opens context menu of item, folder or application (if available). If a menu item contains several level, you can go over them by **Left/Right** buttons.

 
Page turning buttons **Backward/Forward** are used to turn list pages. Continuous **Backward/Forward** keys press turns 10 pages at once in lists and books. Short and continuous **Backward** button press returns to the previous menu (or list's page), closes an application, a context menu and the Library (If you are on the first page).

Also you can configure key mapping to your own in *Settings > Key mapping* section.

WORKING WITH ON-SCREEN KEYBOARD

The on-screen keyboard appears when it is necessary to enter some text info, for example, search query.

To navigate through the keyboard use the navigation keys and **OK** button. To speed up keyboard operations all symbols are divided into 5 zones. The first navigation key press transfers cursor to the middle of the selected zone, and then you can select the required symbol in this zone. **OK** button press types selected symbol.

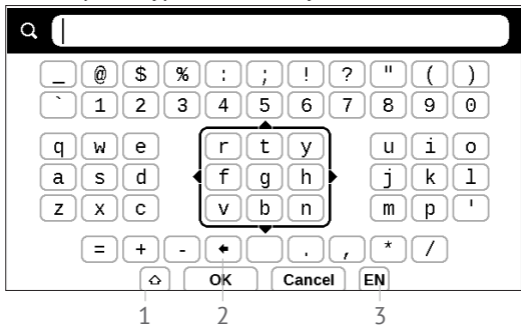

1. Change text case
2. Erase last entered symbol
3. Change input language. To add the language (up to 3 layouts) to the onscreen keyboard layout go to *Settings > Keyboard*.

INSTALLING ADDITIONAL DICTIONARIES

You can install additional dictionaries (you can purchase dictionaries in Book Store (<https://store.obreey.com>)).

1. Copy file with .pbi extension to the Device internal memory
2. Disconnect the Device from PC
3. Loaded file will appear in *Last Events*
4. Press **OK** on the copied extension file and it will be launched as an application.
5. Confirm proposed installation.

Main Menu

IN THIS CHAPTER...

You will learn about basic elements of user interface of the Device. After turning on the Device Main menu will be displayed on the screen (if *Settings > Open at startup* corresponding option was set). To return to the Main menu from any application, press key **Backward**.












Main menu consists of *Recent Events* section and application panel.

Main Menu

Last Events – list of last opened and downloaded books

Last opened



Recent Events	
 User Guide PocketBook	
 Pride and Prejudice Jane Austen	
 Through the Looking-Glass Lewis Carroll	
 +5 new books	
 Oliver Twist Charles Dickens	
 A Study In Scarlet Arthur Conan Doyle	
 A Christmas Carol Charles Dickens	
 Library	 Notes
 Applications	 Settings

Last downloaded



Application panel



RECENT EVENTS

This section displays last actions on the Device, namely last opened and recently loaded books.

 
After you press **OK** on recently opened book title, it will be opened on a page you've finished reading before.

After pressing **OK** on a message about recently added books, *Library* will be opened displaying added books. Books will be grouped by creation date.

LIBRARY

Library is e-books file manager. To open a book, press **OK** on its title. Library menu allows to filter, group, sort, change appearance of the section and perform search.

Context menu, avoked by continuous pressing **OK**, allows performing the following operations:

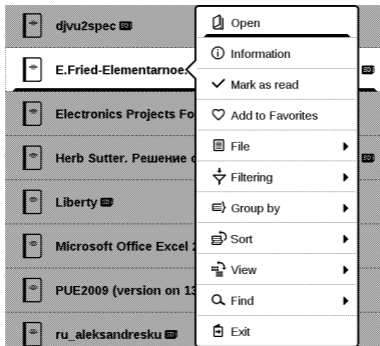

Open (if item can be opened with alternative reader program – *Open with...*)

File – file operations

- *Rename*
- *Move to folder*
- *Delete*

Add to/Remove from Favorites

Mark as read/unread

Information – brief information about book/folder.

Filter

- *All Books* – all books on selected storage are displayed

- *Now reading* – books were opened and read more than one page

- *Favorites.*

Group by – depending on selected grouping next parameters are displayed as folders' titles:



- *Folder* – real folder name
- *Author* – an alphabet is added at the top of the screen
- *Series*
- *Genre*
- *Format*
- *Date Added.*

Sort – performed by following parameters:

- *File names*
- *Book titles*
- *Last opened*
- *Creation date*
- *Series*
- *Author.*

View – the list of books has two viewing modes:

- Simple – in this mode next information is displayed: folder or file format icon; book title and author name (if known); location icon (if file is located on memory card); read percentage.

- Detailed – in this mode there are displayed also book thumbnails, information about format and file size and status icons:  – Read,  – Favorite.

Find – allows quick books search by the following criteria: *by author or title, all books of the author, all books of a series.*

Exit – to leave a library.



NOTES

In this section you can view notes made during reading. After you select a book, where you made a note, the book contents with all the notes will be displayed. Select a note, and reader application will open a book at the place the note was made.

Notes are saved in `\system\config\Active Contents\` folder Device's internal storage.






APPLICATIONS

This section contains games and additional software. To exit an application, press **Backward** key.

Calculator

Engineering calculator supports a wide range of mathematical operations, such as different numeric systems, trigonometric, logarithm, power and logical operations.

Calendar & Clock

Opens current month calendar and clock. Navigation   allows turning over a calendar. The button  returns you to the current month. Read about date and time setting in *Setting* manual's chapter.

Chess

You can play versus your friend or the Device. If you are playing against the Device, you can select 10 difficulty levels. Use the navigation keys to move cursor over the gaming board and **OK** to pick and put a piece.

Dictionary

After you start this application, the on-screen keyboard will appear. Type the word you'd like to find, and application will find its entry in the dictionary. To change dictionaries, press **Forward** button, select the dictionary you need from the list and press **OK**.

After you close the on-screen keyboard (by pressing its keys *OK* or *Cancel*), you will be able to view dictionary page-by-page. To turn pages, use **Left/Right** keys. To bring up the on-screen keyboard again, press **OK**. To exit dictionary, press **Backward** button.

Klondike

Classic solitaire.

Photo

This section opens in the mode of photo view (all photos must be downloaded to the *Photo* folder). You can look through images in JPG, BMP, PNG and TIFF formats.

Snake

The game. Use navigation keys to move the snake and collect bugs. Beware of the walls and other snake!

Sudoku

Popular Japanese puzzle. After pressing **OK** on an empty field, selection window will appear. You can select a digit you think should stand in the cell or set labels – digits, you suggest may stand in the cell.

STATUS BAR

Status bar is located at the bottom of the screen and displays next service information:

- Date and time
- Battery charge.

In reading mode current page number and total page count is also displayed.

Reading Books

In this chapter you will learn how to read e-books and configure reader software for the most comfortable reading.

The Device supports next book formats: PDF, EPUB (including DRM-protected); FB2, FB2.zip, TXT, RTF, HTM, HTML, CHM, DJVU, DOC, DOCX, TCR, PRC.

To open a book, press **OK** on its title in *Last events* or *Library* section. If you opened a book before, it will be opened at the page you've finished reading.

In some book formats (e.g. FB2 or ePub) after opening a book reader application will count pages – this is indicated with ‘..’ sign instead of a page count in a status bar. During page calculation some features will not be available.

TURNING PAGES

Use **Backward/Forward** or **Left/Right** keys to turn pages. Continuous **Backward/Forward** keys press turns 10 pages at once.

FOLLOWING REFERENCES

If a page contains cross-references or footnotes, you can enter links mode on continuous **OK** button press (otherwise you'll get a message informing that a page contains no links to follow). A cursor will appear, and you will be able to select a link using **Down/Up** keys and press **OK** to follow.

 
CHANGING FONT SIZE

In text format books (ePub, FB2 etc., excluding PDF and DjVu) you can change font size with **Up/Down** keys. When


you will reach the largest/smallest one, text will change to smallest/largest.

READING MENU

To access reader application menu press **OK** button.

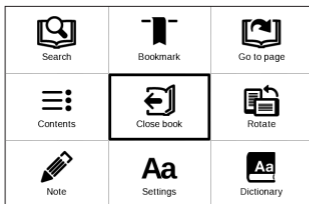

 *Reading menu for books in FB2, TXT,
RTF, HTML, PRC, CHM, EPUB formats*

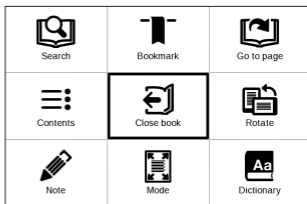

*Reading menu for books
in PDF, Djvu formats*

Contents

Opens structured content of the book if present, otherwise you'll get message about missing table of contents. Active contents display table of contents, bookmarks and

notes you've made during reading. If table of contents has more than one level, higher level entry will be marked with '+' sign. Expanded item is displayed with a sign '-'. Buttons **Left/Right** collapse/expand selected subsection branch.


Use navigation keys to move across the table, **OK** button opens selected book chapter, continuous press of **OK** button opens the context menu.

Using this menu you can open contents entry, edit or delete notes (text or graphic either) and bookmarks, expands/collapses selected subsection branch. Under *Settings* section of the context menu you can configure which elements to display:

- Contents
- Notes
- Bookmarks.

 **Go to Page**

 To select a page, move the slider left or right by **Left/Right** buttons. Press **OK** to go to a chosen page. If you want to open the exact page press *Enter page number*, after typing a page number exactly from on-screen keyboard press **OK**. As you set a slider or enter a page number, a page preview will be opened on a background. If you will exit the menu by pressing **Backward**, you will stay on a page you was before.

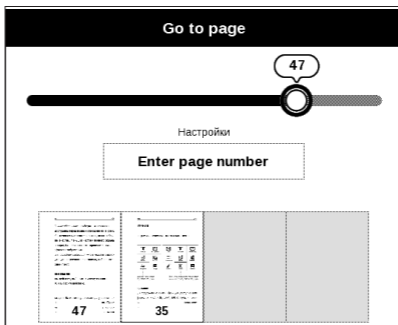

Chapter name is displayed under the scroll bar.

NOTE Only the highest level chapters are marked on a scroll bar

In *Last Opened* sections thumbnails of last four opened pages are displayed.



Search

Search mode works only in books containing text layer. To search text through the book enter it using the on-screen keyboard. Found text would be highlighted, and you can switch between found instances using **Left/Right** navigation keys. To exit search mode press **OK**.

NOTE Search mode is not available for DJVU books.



Bookmarks

Adds current page to bookmarks. After adding a page to bookmarks in a right top corner a bookmark will appear.

All the bookmarks will be displayed in contents. To delete bookmark, select the correspondent menu item again.

NOTE Bookmarks are not available for DjVu books

Aa Settings

For FB2, TXT, RTF, HTML, PRC and CHM books you can set

up the most convenient reading settings: font, font size (you can adjust font size with **Up/Down** navigation keys), line spacing, page margins width or encoding (for TXT and HTML books). FB2 books has two refresh modes: *Best Quality* (default) or *High Speed*.

You can select left to right (by default) or right to left (e.g. for Arabic or Hebrew texts) text direction.



Mode

PDF and DjVu books has *Mode* menu item instead of *Settings*. Select viewing mode using **Left/Right** keys. Following modes are available:

- *Margins cropping* – allows to decrease margins width or height. Define a border, you want to crop by a joystick and press **OK**. Move arrow buttons by a joystick to set margins width and height. After selecting cropping area choose *Accept*. Then define cropping settings: whole document, odd pages, even pages or current page only. Confirm your choice by clicking *Accept*.

 
- *Fit width* – scaling page to the screen width
- *The whole page* – one page scaling
- *Columns* – for reading books with columns. To navigate the page use navigation buttons. A page will be turned after bottom edge of the sheet reached

- *Reflow* – in this mode text is formatted to display completely on a page. You can change font size with **Up** and **Down** keys. Some images and tables may not display

in this mode. Reflow mode is supported for PDF books only. Some tables and pictures cannot be displayed in the *Reflow* mode.

Dictionary

Single-word translation. By default cursor highlights the word to translate and dictionary looks for translation automatically. **OK** button press switches to a toolbar.

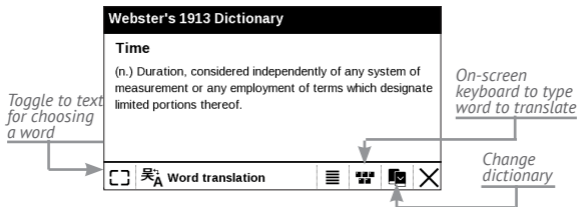

Rotate

 
Fixes the screen orientation: select the suitable one with navigation keys.



Making Notes

You can enter notes mode by pressing **Down** button continuously or by pressing the corresponding menu option.

On the top of the display separate area will appear. Use the buttons **Up**, **Down** to choose the place where your note will begin and press **OK** to set up the top margin of the note. Use navigation buttons to highlight a text fragment and press **OK** to set the bottom margin of the note. The menu, that will appear, suggests you to save selected fragment as image or text (if available) or cancel making note.

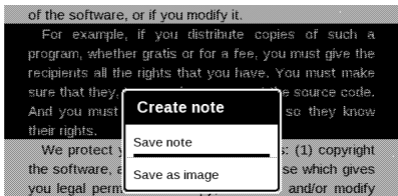

You can look through the notes by choosing *Notes* section in the main menu. By pressing **OK** button on the note, you can switch to the initial page, where it was created.



CLOSING A BOOK

To close a book, select the corresponding reading menu item.

Settings

In this chapter you will learn how to configure the interface and software features of the Device for the most comfortable usage. Select *Settings* Main menu section to configure the Device. All changes will be applied after exiting the section.

If you will encounter any problems with new settings, you will be able to start the Device in safe mode with factory defaults. To start in a safe mode, press and hold **Backward** button during the Device boot.

About device

The following information about Device will be displayed: model, serial number, software version, RAM size, E-ink parameters, total and free memory on the internal storage and on SD-card.

After pressing *More...* button the information about software will be displayed.

Language

Select the Device's interface language.

Keyboard

Under this section you can add up to 3 keyboard layouts.

Appearance

Here you can select the appearance parameters:

- *Theme* – is set by default. If you want to use another theme, download a file in .pbt format to the folder *system/themes*
- *Boot logo* – image displayed during the Device starts. Logos are stored in *system/logo* internal storage folder, so you can copy an image (.bmp, 256 colors) you'd like to be displayed during startup

- *Power-off logo* – the image will be displayed when the Device is off. You can set a cover of the last opened book by setting *book cover*;
- *Text Rendering* – good quality or high speed;
- *Full page update* – select the amount of page turned before the screen will be updated completely. *Always* provides the best quality, but consumes the most power. Less frequency may cause some artifacts from previous pages on a screen
- *LED indication* – you may disable LED indication by selecting *off* in this section.

Key mapping

In this section you can remap hardware keys. To change key action, select it from the list, press **OK** and choose action from the list.

Clock

In this section you will be able to set date, time, time zone and clock format. Also you can set idle time before locking Device and automatic power off.

Open at Startup

Here you can set either open last opened book or main menu.

USB Mode

In this section you can set parameters needed for USB connections. *USB mode* defines how the Device handles USB connection by default: PC link, charge or ask user.

Accounts and Synchronization

- **Adobe DRM** – *Remove ADE Authorization*. After de-authorizing ADE (Adobe Digital Editions) your DRM-protected documents will be unavailable.

Maintenance

This section allows you to configure system parameters.

- *Update software* – the Device will search for updates in the following order: internal storage and microSD card (if installed).
- *Configure dictionaries* – under this section you can uncheck dictionaries you don't want to be displayed in the list during the translation or in *Dictionary* application
 - *Format internal memory* – this action will erase **all** data, except system files.

CAUTION! If you need to erase all data on the Device, use this feature only, don't try to format the Device internal memory via PC.

- *Format SD-card* – this action will erase **all** data on external microSD-card
 - *Backup configuration to SD* – this action will create a *backup* folder on an external microSD-card and will save there system settings. You will be suggested to enter the file name from on-screen keyboard

- *Restore configuration* – select the configuration file to restore from a list
- *Factory reset* – the Device state will be reset to factory default settings, erasing user settings. Other data (e.g. books, photos) won't be lost.

Library

This section is intended for optimization of Library database.

- *Library Data Update* – set the parameters for Library database update:
 - *Off* – database won't be updated;
 - *Once* – database will be updated after exit from *Configuration* section, the parameter will be set to *Off* after update;
 - *Automatically* – database would be update after each Library opening and copying/removal of books (including microSD card change).
- *Optimize Database* – remove old database entries.

To run optimization set the parameter to *Once* and exit *Settings*. The parameter will be set to *Off* after optimization.

Firmware Update

WARNING! Firmware Update is a responsible operation, during which management software of the Device will be changed. In case of improper execution control program may be damaged and will require treatment in the service center. Please perform the upgrade procedure in accordance with the instructions below.

To update software of the Device accomplish the following operations:

1. Open site www.pocketbook-int.com on your PC. Select your country.
2. Click the *Support* button on top menu. Select hardware model of your Device
3. Download the *Firmware* to your PC
4. Unpack the content of the archive, file SWUPDATE.BIN, and copy it to the root folder of MicroSD-Card or internal Device storage
5. Go to Settings > *Maintenance* > *Update software* on your Device

6. Follow the on-screen instructions with pictures:
connect USB cable to the Device and Press central Key

NOTE If the firmware file is located on the SD card, it will have a higher priority in comparison with the file stored in the Device's root folder during the update process.

If the firmware is already in the Device's internal memory or on the SD card, you can also update software during turning on of the Device. During boot press and hold both **Backward** and **Forward** buttons simultaneously until the message *Firmware update...* is displayed on the screen.

The Device checks available update sources in the following order: microSD card and internal memory.

NOTE: You can check your Firmware version in *Main menu > Configuration > About device*

Troubleshooting

Error Message	Reason	Correction Method
<i>No upgrade image found</i>	File SWUPDATE.BIN cannot be found on the microSD card. Make sure the file is in the root folder of the card.	Try to format your Micro SD card (make a backup copies of all its content prior to formatting) and copy the file to the root of the empty card. If this error persists, use another card.
<i>Upgrade image is corrupted or Image is empty</i>	SWUPDATE.BIN file is damaged or there is no space available on the microSD card.	Delete some files from your card and copy SWUPDATE.BIN file on it one more time. Repeat the download from www.pocketbook-int.com . If this error repeats, use other card.
<i>File read error</i>	MicroSD card error	Try to use another MicroSD card
<i>Error. A different firmware version is installed on the device</i>	A firmware file of an older version is stored in the device internal memory.	Delete the old version of the firmware file from the Device's internal memory root folder

Troubleshooting

Malfunction	Possible Reason	Solution
Device does not turn on or turns on but only the logo is loaded	Battery is low	Charge the battery
A book does not open - the message <i>Book is probably damaged or protected</i> appears, or nothing happens at all	The book is damaged	If the book was downloaded from the online store try to re-load it again. If the file opens on your PC, but does not open on the Device, save the book in another format (TXT, DOC, PDF).
Html book opens but is displayed incorrectly. For example, there are empty pages, some part of the text is missing etc.	HTML-files contain non-text elements (frames, JAVA-scripts, flash-elements)	Save the page in TXT format
Book opens but various symbols, question marks etc. are displayed instead of letters	Incorrect encoding	Switch to reading mode, select <i>Settings</i> and change encoding
No response when you press any key	Sometimes (e.g., when downloading damaged or too large books) the Device may freeze	Close the frozen application by pressing the Return key for 1–2 sec. If this doesn't help, press Reset on the rear panel to reload your device.

Malfunction	Possible Reason	Solution
After connection to PC disks are not displayed in Explorer	Your Device is in the battery charging mode.	Check USB mode in <i>Settings</i> Main Menu item. Set <i>Connection to PC</i> or <i>Ask at Connection</i>
	No signal in connection cable	Check USB cable condition and its proper connection to connector. Try to connect the USB-cable to another port
Bookmarks, settings and current position in file cannot be saved	File system damaged	Connect the device to a PC and check disks. To proceed, open <i>My Computer</i> , right-click on the selected disk and select <i>Properties >Service > Check Disk</i>
	Internal memory is full	Delete books, images and/or music files that you do not need
Battery discharges too fast	Disabled automatic turning off	<i>Settings > Clock</i> in Main Menu. Select automatic turn off time in <i>Auto Turn Off in...</i> item

Customer Support

For detailed information about service centers in your country please use contacts below:

Telephone

<i>Deutschland</i>	0-800-187-30-03
<i>USA</i>	1-877-326-01-96
<i>Российская Федерация</i>	8-800-700-00-34
<i>Україна</i>	0-800-304-800
<i>Қазақстан</i>	8-800-333-35-13
<i>Беларусь</i>	8-820-0011-02-62

www.pocketbook-int.com/support/

service@pocketbook-int.com

Compliance with International Standards

Brand name: PocketBook Basic New

Model name: PocketBook 613



The EUT should be supplied by USB port from complied Limited Power Source of personal computer or notebook.

The EUT should be supplied by Adapter from complied Limited Power Source.

Rated output voltage: DC 5V 1A

This indicates compliance with the R&TTE Directive 1999/5/EC and meets the relevant parts of following technical specifications:

EN60950-1:2006+A11:2009+A1:2010+A12:2011	Information technology equipment – Safety – Part 1: General requirements
EN 55022: 2010 Class B	Information technology equipment - Radio disturbance characteristics - Limits and methods of measurement
EN 55024: 2010	Information technology equipment - Immunity characteristics - Limits and methods of measurement

This equipment complies with the European Council Recommendation of 12 July 1999 on the Limitation of Exposure of the General Public to Electromagnetic Fields [1999/519/EC].

PocketBook International SA
Crocicchio Cortogna, 6, 6900, Lugano, Switzerland
Tel. 0 800 187 3003
Designed by Obreey Products. Assembled in PRC.

Contains Reader® Mobile technology
by Adobe Systems Incorporated

