

PocketBook

Basic LuxTM 3

User Guide

Table of Contents

SAFETY PRECAUTIONS.....	6
APPEARANCE.....	11
TECHNICAL CHARACTERISTICS	12
GETTING STARTED	13
Charging Battery	13
Device management	15
Main menu overview	16
Navigation	17
Working with On-Screen Keyboard	19
Recent Events	20
Loading Files	21
Frontlight	24
Inserting Micro SD Card	25

APPLICATIONS	27
Library	28
Dictionary	28
General	29
Calendar & Clock	29
Calculator	29
Gallery	29
RSS News	30
Games	31
Klondike	31
Sudoku	31
Chess	34
Snake	34
Services	34
Dropbox PocketBook	34
Send-to-PocketBook	36

READING BOOKS..... 41

Turning Pages	44
Following References	44
Changing Font Size	45
Reading Menu	45
Go to page	52
Closing a Book	53
PocketBook Cloud	53

SETTINGS 58

Wi-Fi	58
Accounts and Synchronization	59
Personalize	62
Languages	64
Date/Time	65
Saving power	65
Maintenance	65
Software	67
About Device	67

FIRMWARE UPDATE	69
TROUBLESHOOTING.....	72
CUSTOMER SUPPORT.....	74
COMPLIANCE WITH INTERNATIONAL STAND- ARDS.....	75

 
Safety Precautions

Before start working with the Device, please, read this section carefully. Following these instructions will help you ensure your safety and extend service life of the Device.

Storage, Carriage and Usage Conditions

Device operating temperature range is 0°C to 40°C, so don't expose the Device to excessively high or low temperatures. Never leave cables near heat sources. Heated cables or their insulation may become deformed or damaged, which could lead to fire or electric shock.

Try to avoid next impacts:



Maintenance

- ⊗ Do not leave the Device for a long time in poorly ventilated environment, e.g. in a car or in closed tight boxes/ packaging.

- ⊗ Neither drop nor try to bend the Device.

- ✓ Protect the screen from objects that may scratch or damage it. To ensure adequate protection of the screen, we recommend storing the Device in a protective and/or hard cover.

- ✓ Keep away from children.

- ⊗ Do not disassemble or modify the book reader.

- ⊗ Do not use the Device with a damaged battery or charger (broken case, poor contact, broken feed cable). If the battery is damaged (cracked case, leakage of electrolyte, off-shape etc.) it should be replaced by the authorized personnel. Usage of home-made

or modified batteries may cause an explosion and/or damage the Device.

⊗ Do not use organic or inorganic solvents (e.g. benzoyl etc.) to clean the screen/case.

⊙ Use a soft cloth to remove dust from the Device's surface. Apply a few drops of distilled water to remove dirt.

Up to five faulty pixels are acceptable in the screen and do not constitute a warrantable defect of the screen.

Warning: The screen of the device has a fragile glass base! To avoid damage, make sure not to drop, bend, or apply pressure to the device, do not allow point pressure on the screen surface and any other actions that might break or damage the glass base. Also, the screen does not have any special protective layer so please avoid any contact between its surface and objects that might


leave marks or scratches on it. To decrease the risk of damaging the device and its screen it is recommended to keep and transport it in a Pocketbook protection cover.

If the device has not been used for a long time, the battery charge indicator may not work when the charger is connected. In this case, connect the charger, let the device charge for 1 hour, then disconnect and reconnect the charging device or USB cable. The device can then be used as normal.

By the end of product guarantee term, please contact the nearest authorized service facility for examination on the subject of security is maintained.

For detailed information about service centres in your region please visit the official website of PocketBook International: www.pocketbook.ch.

**Utilization**

Incorrect disposal of this Device may have adverse  impacts on the environment and public health. To prevent such consequences follow the device-specific disposal requirements. Recycling of these materials helps preserve natural resources. For more information regarding recycling issues please contact local municipal authorities, your domestic waste collection service, store where you purchased the Device, or the authorized service centre.

Disposal of electric and electronic components (the Directive is applicable to the EU and other European countries where separate waste disposal systems exist). In other countries dispose batteries accordingly to local laws.

Do not destroy the battery by burning it to avoid the danger of explosion.

Appearance

1. Backward – in reading mode turns page backward; in navigation mode – goes to the previous menu or page of the list;

2. Left;

3. Down;

4. OK – short press opens an element (e.g. book or menu item), continuous one – opens item's context menu (if available);

5. Up;

6. Right;

7. Forward – turns page forward;

8. Micro-USB port – for connecting to computer or charger (charger may be optional);

9. MicroSD card slot – for external memory card (Micro SD card may be optional);

10. On/Off (power) button – turns the Device on/off.



NOTE: You can configure key mapping to your own in *Settings > Personalize > Key mapping*. Navigation and page turning buttons mapping depends on screen orientation.

Technical Characteristics

Display	6" E-Ink Carta™ 1024×758, 212 dpi, B&W
Frontlight	Yes (SMARTlight)
Processor	Dual Core (2×1 GHz)
RAM	512MB
Storage	8 GB *
Operating system	Linux® 3.10.65
Communications	Micro-USB Wi-Fi (802.11 b/g/n 2,4 GHz)
Battery	Li-Ion Pol, 1300 mAh
Cover sensor	Yes
Memory slot	microSD/SDHC up to 128 GB (FAT32) ACSM, CHM, DJVU, DOC, DOCX, EPUB,
Book formats	EPUB(DRM), FB2, FB2.ZIP, HTM, HTML, MOBI, PDF, PDF (DRM), PRC, RTF, TXT.
Image formats	JPEG, BMP, PNG, TIFF
Dimensions	161.3 × 108 × 8 mm
Weight	155 g

* The actual available internal storage size may vary depending on the software configuration of your device.

 
** Battery life and values mentioned above might vary depending on usage mode, connectivity and settings.

Getting Started

In this chapter you will learn how to prepare the Device to work and about its main control features.

CHARGING BATTERY

You can charge the battery from **(1)** PC using USB-cable or from **(2)** the power line using a charger (optional).

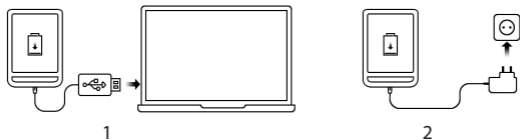

To charge the battery for the first time, do the following:

- Connect the Device to a computer or charger with USB-cable. The device will turn on as soon as charging starts.


- When the battery is fully charged, you can disconnect the cable from the Device which is ready for usage.

If the Device is on when you connect the cable to PC, a dialog window asking to select action – *PC link* or *Charge* – will appear. Charging starts only if the appropriate mode was selected.


DEVICE MANAGEMENT

Turn on	Press On/Off button. When the Device is ready to operate, Main menu or last opened book will appear, depending on settings.
Turn off	Press and hold On/Off button for about two seconds until the Device goes off.
Lock	You can lock your Device in three ways: <ol style="list-style-type: none">1. Press On/Off button.2. You can set automatic key lock or power off: go to <i>Settings > Saving Power > Power off after</i> or <i>Auto screen lock</i>, and set the idle time before power off or locking Device.
Unlock	Press On/Off button.
Restart	In case if your Device 'freezes' (don't respond to keys presses, you must give the device time (up to 30 seconds) to process commands. If it does not help, you can restart it by pressing On/Off button for 10 seconds.

 MAIN MENU OVERVIEW

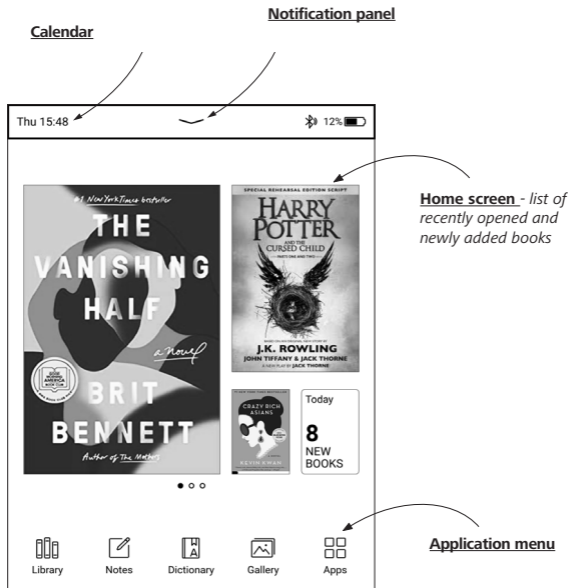

Notification panel

Choose the icon  to open a *Notification panel*.



NOTE: You can open *Notification panel* also pressing a **Menu** button.

Notification panel gives an easy access to configuration of Wi-Fi, Task Manager, Flight Mode, Sync of network services and Frontlight.

NAVIGATION

Use navigation buttons **Up**, **Down**, **Left**, **Right** to select required item (e.g. book or menu item).

ATTENTION! If you change screen orientation, navigation and page turning keys mapping will be also changed accordingly to the side you've changed orientation to.

Press **OK** button shortly to open selected item. Continuous **OK** press opens context menu of item, folder or application (if available). If a menu item contains several level, you can go over them by **Left/Right** buttons.

 
Page turning buttons **Backward/Forward** are used to turn list pages. Continuous **Backward/Forward** keys press turns 10 pages at once in lists and books. Short and continuous **Backward** button press returns to the previous menu (or list's page), closes an application, a context menu and the Library (If you are on the first page).

Also you can configure key mapping to your own in *Settings > Personalize > Key mapping* section.


WORKING WITH ON-SCREEN KEYBOARD

The on-screen keyboard appears when it is necessary to enter some text info, for example, search query.

To navigate through the keyboard use the navigation keys and **OK** button. To speed up keyboard operations all symbols are divided into 5 zones. The first navigation key press transfers cursor to the middle of the selected zone, and then you can select the required symbol in this zone. Press **OK** button to type the selected symbol.

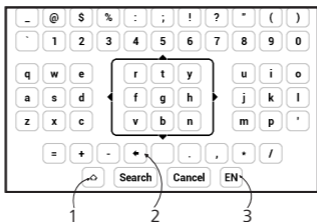

1. Change text case
2. Erase last entered symbol
3. Change input language. To add the language (up to 3 layouts) to the onscreen keyboard layout go to *Settings > Languages > Keyboard Layouts*.

As you type a password (e.g. Wi-Fi credentials)  icon will appear on a text field. Select icon and press **OK** to see typed symbols.

RECENT EVENTS

This section displays last actions on the Device, namely last opened and recently loaded books.

After you press **OK** on recently opened book title, it will be opened on a page you've finished reading before.

After pressing **OK** on a message about recently added books, *Library* will be opened displaying added books. Books will be grouped by creation date.

LOADING FILES

Connect the Device to the PC using microUSB cable.

NOTE: The Device should be kept on while transferring files.

You will be prompted to select USB mode: *PC Link* or *Charge* either. Select *PC Link*. Operating system of computer will detect Device's storage as removable disk (if SD card installed – as two ones). Now you can copy files to the Device or SD card using Explorer or other file manager.

ATTENTION! After copying files safely remove the Device before disconnect the cable!

Downloading protected e-books (Adobe DRM)

Registration at www.adobe.com is required to use e-books in protected format (*Sign in > Create an Adobe Account*).

Download via *.acsm

1. Visit www.adobe.com via your browser;

NOTE: the current version of your browser on the Device does not support Flash Player

2. Open *Menu > Products > All products*;
3. Follow the link *Digital Editions* in the alphabetical index of products.
4. Open *Visit the sample eBook library* at the bottom of the page to enter the library;
5. Choose a book and click *Download item*.
6. A download window will appear on the screen. The file name should contain the name of the book and the file extension *.acsm*. Click *Save*.

7. After the file is saved on your PC, a link as URLLink.acsm will appear.

NOTE: The same sequence of actions allows downloading a link to a protected book from any online bookstore.

Do the following to open a protected (DRM) book on the Device:

1. Copy the file of the link to a book (*.acsm) to your Device.
2. Find and open the file on your Device.
3. Follow the on-screen instructions to activate your Device. To do this, use the on-screen keyboard to enter the login and password of your account on www.adobe.com into the *Device Activation* form. Then you will be able to download the book.
4. Download the book. After the download is complete, a full version of the book will be available for reading in the *Digital Edition* folder.

The downloaded book is protected (DRM) and cannot be opened by a non-registered user.

Download books via PC

1. Open the *Adobe Digital Editions* application.

NOTE: When connecting your Device to PC for the first time, *Adobe Digital Editions* prompts you to activate the new device. Use your registration data at www.adobe.com for this. If the Device is not activated, it will be impossible to copy a book from PC to device using *Adobe Digital Editions*.

2. Select the *Go to library view* icon.
3. Click *All items*.
4. Choose a book and copy it to your Device.

FRONTLIGHT

To adjust the frontlight level, please use the **Left/Right** button and move a Slider in the notification bar.

FRONTLIGHT



Brightness

 


Smartlight



INSERTING MICRO SD CARD

The Device already has 8 GB of internal storage, but you can extend it by using micro SD card (up to 128 GB (file system FAT32)). Insert it to the slot, like it is shown on a figure, and slightly push until card will be fixed.

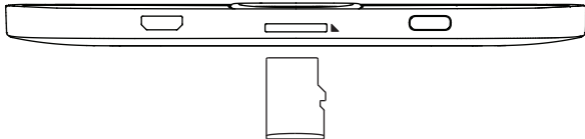

To eject the card, slightly press on its edge until it will be unfixed, and pull it to get.

ATTENTION! If your SD card get stuck, do not try to eject it by yourself and immediately call Customer Support.


For more information about formatting the SD card, see the *Maintenance* section.

Applications

 
In this section, you can review the applications installed on your device.

The default home screen contains four applications:

- *Library;*
- *Notes;*
- *Dictionary*
- *Gallery.*

Other apps are available in the application menu. To open the application menu, click on the icon .

To move, replace, or delete apps in the Main menu, use the context menu.

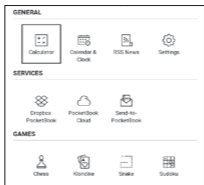

 **Library**

Library is e-books file manager, which allows to group, sort, change appearance of the section and perform search. Read more about this app at [*Library*](#).

 **Dictionary**




After your start this application, the on-screen keyboard will appear. Type the word you'd like to find, and application will find its entry in the dictionary. To change dictionaries, press **Forward** button twice, select the dictionary you need from the list and press **OK**.

After you close the on-screen keyboard (by pressing its keys *OK* or *Cancel*), you will be able to view dictionary page-by-page. To turn pages, use **Left/Right** keys. To bring up the on-screen keyboard again, press **OK**. To exit dictionary, press **Backward** button.

GENERAL



Calendar & Clock

Opens current month calendar and clock. Navigation   allows turning over a calendar. The button  returns you to the current month. Read about date and time setting in *Date/Time* manual's chapter.



Calculator

Engineering calculator supports a wide range of mathematical operations, such as different numeric systems, trigonometric, logarithm, power and logical operations.




Gallery

This section opens in the mode of photo view (all photos must be downloaded to the *Photo* folder). You can look through images in JPG, BMP, PNG and TIFF formats.



RSS News

Application for adding and reading RSS feeds. To add RSS news feeds, open RSS setup. Select the *Add RSS feed* option. Enter the feed address using the on-screen keyboard.

To delete the feed, select it, open the context menu and select *Delete* command or press the *Recycle bin* icon .

To edit the feed, select it, open the context menu and select *Edit name* or *Edit URL* command. Edit the RSS feed name or address using the on-screen keyboard.

To update feed, select *Update* in the application menu. Updated content is added to the file with *.hrss* extension, and the file will be accessible for reading after updating. The news downloading status is displayed while updating. After the update file is available for reading off-line using the browser.

To read latest feeds, select *Read the latest news* option in the application's menu. The latest downloaded RSS feed updates open in browser.

News Archive: by selecting this option you can choose to read the previously stored updating RSS feeds.

GAMES



Klondike

Classic solitaire.



Sudoku

Popular Japanese puzzle.

Navigation: Use the navigation keys to move around the grid and bottom panel. Click **OK** button to enter. **Backward/Forward** buttons toggle between the grid and the panel and vice versa.

Controls: To enter a number into a cell of the grid, you can choose firstly a number or a cell, in which you want to enter a number or a label.

Cell first:

1. Set a frame on the chosen cell and press **OK** button.

2. Press **Backward** or **Forward** to move to the bottom panel to choose correspondingly a number (left) or labels (right) for the specified cell. Press **OK** to enter;

3. The chosen number will be entered into the selected cell.

Number first:

1. Press **OK** on the cell with “givens” (digits known in the beginning of the game) and on numbers of the bottom panel.

2. The chosen number will be highlighted on the bottom panel, showing that it is active.

3. Press **OK** on the cell of the grid to enter the highlighted number in a cell.

NOTE: A digit on the bottom panel is highlighted until another one is chosen.

Bottom panel:

- ↶ — Step Back (Cancel previous action);
- ↷ — Step forward (active after “step back”);
- ✖ — Clear cell.

Hints:

- — a hint by highlighting instances of the chosen numeral.
- 🔍 — hiding labels, which are not correct for a cell no more
- 🔍 — a hint about possible labels for a cell.



Chess

ou can play versus your friend or the Device. If you are playing against the Device, you can select 10 difficulty levels. Use the navigation keys to move cursor over the gaming board and **OK** to pick and put a piece.



Snake

The game. Use navigation keys to move the snake and collect bugs. Beware of the walls and other snake!

SERVICES



Dropbox PocketBook

DropBox application allows to download files, added to Dropbox from any computer or any Device with installed Dropbox app or from the [Dropbox website](#), to your Device. And you do not need to install anything to your PocketBook, it is enough to authorize in the service.

How to start using

1. Register in the Dropbox service (www.dropbox.com);
2. Input your Dropbox account data (email address and password) on your PocketBook Device in the section *Settings > Accounts and Synchronization > Dropbox > Login* to authorize Dropbox. (The Wi-Fi connection should be on, otherwise you will be asked to turn it on);
3. After successful authorization, the *Dropbox PocketBook* sync folder will be created in the Library of the Device. The *Application > Dropbox PocketBook* directory will show up in your Dropbox account, and after synchronization it will be available from other devices with Dropbox.

NOTE: The application on your device will have access only to files in the *Application > Dropbox PocketBook* folder on the server

How to synchronize

Automatically:

1. Files, added to the directory *Application > Dropbox PocketBook* on the server and to the sync folder on

your Device, will be automatically synchronized when the internet connection is on.

2. All synchronized files will be downloaded to the sync folder in the Library (by default, *Dropbox PocketBook* is the sync folder, but you can change it in *Settings > Accounts and Synchronization > Dropbox > Sync folder*).

Manually:

1. To synchronize all content in sync folders, in *Settings* choose '*Accounts and Synchronization > Dropbox > Synchronize files now*', or in the *Library* choose '*Synchronize files now*' in the context menu of the sync folder.

2. After synchronization all obtained files will be also available in the sync folder in the Library on the Device.



Send-to-PocketBook

The application allows to send files to the email address of your Device. Sent books will be automatically downloaded to your Device, if the Wi-Fi is turned on.

How to start using

1. Register for the Send-to-PocketBook service, for this purpose do the following:

- Launch application:
 - from the *Applications > Send-to-PocketBook* section;
 - or from *Settings > Accounts and Synchronization > Send-to-PocketBook*.

NOTE: The Wi-Fi connection should be on, otherwise you will be asked to turn it on.

- In the opened wizard enter your contact email address and password.
 - The email with the activation link will be sent to the specified address. Follow this link to receive the email address of your Device (for example, username@pbsync.com).

NOTE: The contact email address is used only for the authorization of the application, and the service address of the Device

username@pbsync.com is used for sending books to it, if you want them to be downloaded to your Device.

2. After activation update the registration wizard on the Device. After that all applications features will be available for you, and the download folder for received books will be created in the library — *Send to PocketBook*.

How to get files

Automatically:

1. Files, sent to the service email address of your Device, will be automatically downloaded to the download folder in the Device Library, when the internet connection is on. Download folder is available after authorization from the locations:

- *Applications > Send-to-PocketBook;*
- *Settings > Accounts and synchronizations > Send-to-PocketBook > Go to folder* of the context menu of the *Download folder;*
- *Library > Send-to-PocketBook.*

2. By default, '*Send-to-PocketBook*' is the download folder, but you can change it at registration or in the *Settings > Accounts and synchronization > Send-to-Pocket-Book > Download folder* section.

Manually:

To update the content of the download folder, in *Settings* choose *Accounts and synchronization > Send-to-Pocket-Book > Receive files now* or in *Library* choose *Receive files now* in the context menu of the download folder.

Received files will be also available in the download folder in the Library of the Device.

The list of trusted senders

Documents can be downloaded on the Device, if they are sent from the address, contained in the 'white list' (a list of the trusted senders).

The address, specified at registration, is contained in the list by default.

If the mail is sent to your Device from the unknown address, you will receive the letter with a proposal to add a sender to the 'white list'. After your confirmation you will receive files from the added address to your Device. Thus, spam won't get on the Device.

Reading Books

In this chapter you will learn how to read e-books and configure reader software for the most comfortable reading.

The Device supports next book formats: PDF, PDF (DRM), EPUB, EPUB (DRM), DJVU, FB2, FB2.ZIP, DOC, DOCX, RTF, PRC, TXT, CHM, HTM, HTML, MOBI, ACSM.

To open a book, press **OK** on its title in *Last events* or *Library* section. If you opened a book before, it will be opened at the page you've finished reading.

 
LIBRARY

Library is e-books file manager. To open a book, press **OK** while its title is selected. Library menu allows to filter, group, sort, change appearance of the section and perform search.


1. Grouping criteria

Depending on selected criterion books are grouping by:

- *All Books;*
- *Authors;*
- *Genres;*
- *Collections;*
- *Favorites;*
- *Folders;*
- *Formats;*
- *Series.*

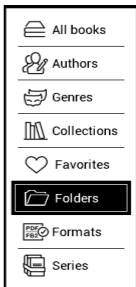


 The results of grouping can be displayed as ascending (A-Z) or descending (Z-A).



2. Sorting criteria

 - *By opening date;*
- *By addition date;*
- *By title;*
- *By author.*

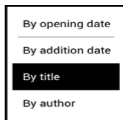

3. Books list views

■ ■ *Simple* – in this mode the cover icon of the book is displayed.

■ ■ *Detailed* – in this mode there's added author, title, thumbnails, information about file format and size, read percentage.

≡ *List* - in this mode next information is displayed:

- Folder or book icon;
- Book title and author name (if known);
- Read percentage and *Read status*.

Context menu

Context menu, evoked by continuous pressing **OK**, allows performing the following operations:



- *Book Info* - brief information about book/folder;
- *Mark as read*;
- *Add to Collection*;
- *Add to Favorites*;
- *All books of author*;
- *Delete*;
- *Select Multiple...* - multiple choice of files;
- *Open with*.

TURNING PAGES

Use **Backward/Forward** or **Left/Right** keys to turn pages. Continuous **Backward/Forward** keys press turns 10 pages at once.

FOLLOWING REFERENCES

If a page contains cross-references or footnotes, you can enter links mode on continuous **OK** button press (otherwise

 
you'll get a message informing that a page contains no links to follow). A cursor will appear, and you will be able to select a link using keys and press **OK** to follow.

CHANGING FONT SIZE

In text format books (ePub, FB2 etc., excluding PDF and DjVu) you can change font size with **Up/Down** keys.

READING MENU

To access reader application menu press **OK** button.

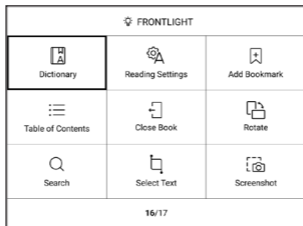

☰ **Contents**

Opens structured content of the book if present, otherwise you'll get message about missing table of contents. Active contents display table of contents, bookmarks and notes you've made during reading. If table of contents has more than one level, higher level entry will be marked with '+' sign. Expanded item is displayed with a sign '-'. Buttons **Left/Right** collapse/expand selected subsection branch.

Use navigation keys to move across the table, **OK** button opens selected book chapter, continuous press of **OK** button opens the context menu.

Using this menu you can open contents entry, edit or delete notes (text or graphic either) and bookmarks, expands/collapses selected subsection branch. Under *Settings* section of the context menu you can configure which elements to display:

- *Contents*;

- *Bookmarks;*
- *Notes.*

Search

Search mode works only in books containing text layer. To search text through the book enter it using the on-screen keyboard. Found text would be highlighted, and you can switch between found instances using **Left/Right** navigation keys. To exit search mode press **Backward/Forward**.

NOTE: Search mode is not available for DJVU books.

Bookmarks

Adds current page to bookmarks. After adding a page to bookmarks in a right top corner a bookmark will appear.

All the bookmarks will be displayed in contents. To delete bookmark, select the correspondent menu item again.

 
A Settings

In this section you can find out how to configure your reading settings for different book formats. You can also learn about all the available options and features in this menu.

EPUB, FB2, etc.

To configure *EPUB*, *TXT*, *FB2*, *DOC* and other text format books, open the Reading menu and select *Settings*.


Page tab - you can choose line spacing, font size, margins width and also enable or disable hyphenation.



Font tab - use this tab to select font style.



 Screen tab - you can enable or disable page numbering and **on** **off** Status bar.



Built-in page numbering displays the number of pages in the book's original layout. One page can cover one or several screens, depending on reading settings.

If the function is disabled, the numbering will display the number of screens. It may take a while to calculate the number of screens when you first open the book, or after the reading settings have been changed. The number of screens won't be calculated again whenever the book is opened after this.

PDF and DjVu

PDF and DjVu books has *Settings*. Select viewing mode using **Left/Right** keys. Following modes are available:

- *Margins cropping* – allows to decrease margins width or heigth. Define a border, you want to crop by a joystick and press **OK**. Move arrow buttons by a joystick to set margins width and heigth. After selecting cropping area choose *Accept*. Then define cropping settings: whole

document, odd pages, even pages or current page only. Confirm your choice by clicking *Accept*.

- *Fit width* – scaling page to the screen width
- *The whole page* – one page scaling
- *Columns* – for reading books with columns. To

 
navigate the page use navigation buttons. A page will be turned after bottom edge of the sheet reached

- *Reflow* – in this mode text is formatted to display completely on a page. You can change font size with **Up** and **Down** keys. Some images and tables may not display in this mode. Reflow mode is supported for PDF books only. Some tables and pictures cannot be displayed in the *Reflow* mode.



Dictionary

Single-word translation. By default cursor highlights the word to translate and dictionary looks for translation automatically. **OK** button press switches to a toolbar.

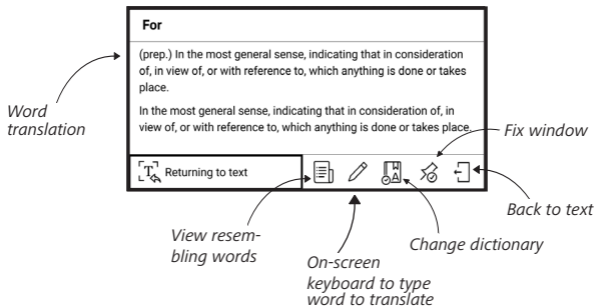

Rotate

Fixes the screen orientation: select the suitable one with navigation keys.

 
Select Text

You can enter notes mode by pressing **Down** button continuously or by pressing the corresponding menu option. On the top of the display separate area will appear. Use the buttons **Up**, **Down** to choose the place where your note

will begin and press **OK** to set up the top margin of the note. Use navigation buttons to highlight a text fragment and press **OK** to set the bottom margin of the note. You can look through the notes by choosing *Notes* section in the main menu. By pressing **OK** button on the note, you can switch to the initial page, where it was created.

GO TO PAGE

If you want to open the exact page press *Go to page*, after typing a page number exactly from on-screen keyboard press *OK*. If you will exit the menu by pressing **Backward**, you will stay on a page you was before.

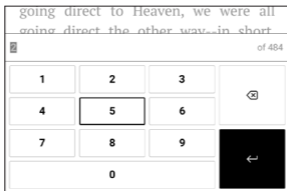

CLOSING A BOOK

To close a book, select the corresponding reading menu item.

PocketBook Cloud

You can read your books on different devices and be confident that all your books, favorites, collections and reading progress will be saved. You can access your books from any device logged into your PocketBook Cloud account.

NOTE: PocketBook Cloud stores files in PDF, PDF (DRM), EPUB, EPUB DRM, DJVU, FB2, FB2.ZIP, DOC, DOCX, RTF, PRC, TXT, CHM, HTM, HTML, MOBI and ACSM formats. However, syncing reading position is currently only available for PDF and EPUB formats.

How to sign in

You can sign into the *PocketBook Cloud* service through a website, the PocketBook Reader mobile app (for Android and IOS) or from your PocketBook e-ink reader.

When you first set up your Device, you will be asked to sign into your *PocketBook Cloud* account or, if possible, you will be automatically registered.

If you have skipped this step, a prompt to sign in to your *PocketBook Cloud* account will appear in the notification panel.


To sign in:

1. Tap on this notification or go to *Settings > Accounts and Synchronization > PocketBook Cloud*.
2. Go to the Sign in form and follow the instructions to create a new account.

Sync process

Your book list and reading position automatically sync when you:

- *log into your PocketBook Cloud account,*
- *open a book,*
- *close a book,*
- *add to a Collection / remove from a Collection,*
- *add to Favorites / remove from Favorites.*

To force synchronization, click on the sync icon  on the notification panel.

 
If your Device isn't connected to the internet, you will only have access to the books which are already on your Device. Once the device is connected to the internet all your books will be synced.

If an error occurred during synchronization, please check your internet connection. If your internet connection is working, try to sync your books later.

Working with files

- *File storage.* A dotted frame line around the book on the PocketBook e-ink reader means that the book has not been loaded yet to the device's memory and is only stored in your *PocketBook Cloud* account.

- *Uploading new books.* You can upload new books to your *PocketBook Cloud* via website, PocketBook e-ink reader or Android/IOS PocketBook Reader app. After synchronization, all new books are automatically stored in your *PocketBook Cloud* account. The book will be automatically uploaded to your *PocketBook Cloud* after you open the book on your Device, or you can choose *Upload to PB Cloud* option in the context menu.

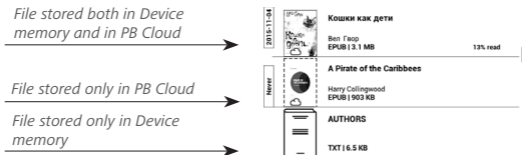

- *Deleting books.* Use the context menu to remove a book from PocketBook Cloud. There are two options – *Delete* (from the device's memory) and *Remove from Cloud*. If the file is stored on *PocketBook Cloud* and is only deleted from the device's memory, it will appear again after the next synchronization. If the file was deleted from the Cloud, it cannot be restored.

Settings

In this chapter you will learn how to configure the interface and software features of the Device for the most comfortable usage. Select *Settings* at *Main menu* panel to configure the Device. All changes will be applied after exiting the section.

WI-FI

In this section you can set parameters needed for network connection.

Network access — **on** or **off**. After network access activation, the following settings appear:

- *Connection to hidden networks* — read more in the [*Connecting to the Internet*](#) section of this manual.
- *Available Networks* — a list of available networks. Choose one of them and you'll see parameters of this connection: Network name (SSID), signal strength, security, IP-address, network mask, main gateway, DNS.

NOTE: If Scanning is displayed instead of *Available Networks*, it means that Device is searching for available networks.



ACCOUNTS AND SYNCHRONIZATION

Adobe DRM

To authorize, input your *Login* (e-mail address) and *Password*. When you are authorized, your login and *Exit* from *Adobe DRM* item are displayed. After exit all protected DRM documents will be unavailable.

Send-to-PocketBook — the following options are available:

- *PocketBook account*: your account email.
- *Login/Log out*: if you are not authorized in the application, input your contact email address and password, to authorize. If you are authorized, the email, to which you can send books, is displayed. You can logout Send-to-PocketBook.

- *Receive files now*: The content of the *Download folder* will be updated. Before update, please, check if your Device is connected to the Internet.
- *Receive files automatically*: *On* or *Off*. Files, sent to the Device address username@pbsync.com, will be automatically updated in the download folder, if Wi-Fi connection is on. You can turn off automatic receiving files to optimize the Device productivity.
- *Download folder*: location of received files. The *Send-to-PocketBook* folder is set by default. You can choose any other folder or create a new one in the internal Device storage or on the external SD-card.
- *About service* — more detailed about service.

Dropbox — In this section the following options are available:

- *Login/Log out*: if you are not authorized in the application, input your Dropbox account data to authorize. If you are authorized, then you can logout Dropbox.

- *Synchronize Now*: Files in the *Sync folder* and Pocketbook device directory will be synced. Before syncing files, please check if your Device is connected to the Internet and is linked to the proper Dropbox account

- *Autosync*: Turn *On* or *Off* auto synchronization. The service is turned on automatically at the authorization, so Dropbox will automatically sync files, if Wi-Fi connection is on. You can turn off autosync to optimize the Device productivity.

- *Sync Folder*: location of synced files. You can also move files to *Sync folder*, if you want to sync them with *Dropbox Pocketbook* directory on the server. The *Dropbox PocketBook* folder on the Device is set by default. You can choose another folder or create a new one in the internal Device storage or on the external SD-card.

- *About Service* — more detailed about service.

PocketBook Cloud — In this section the following options are available:

- *Login/Log out*: you can sign into the *PocketBook Cloud* service through a website, the PocketBook Reader mobile app (for Android and IOS) or from your PocketBook e-ink reader. If you are signed in, then you can log out.
- *Sync Now*: Files in the *Download folder* and Pocketbook device directory will be synced. Before syncing files, check if your Device is connected to the internet and is linked to the correct *PocketBook Cloud* account.
- *Download Folder*: the location of synced files. You can choose another folder or create a new one in the internal Device storage.
- *About Service* — more information about the service.



PERSONALIZE

Logos — the image will be displayed when the Device is off. You can set a cover of the last opened book by setting *book cover*.

NOTE: You can also set your own picture as a logo from the *Gallery* application. Read about it in the *Gallery* section.

LED indication — you can turn on or off an LED indicator. The LED indicator is on if the device processor is active and off if the device processor switches to the sleep mode to save power.

When connecting to a charger or a PC via a USB port, the LED indicator of the device is on when the battery is charging and turns off when charging completes.

Key Mapping. In this section you can remap hardware keys. To change key action, select it from the list and select action from the list.

Complete Page Refresh. Select the amount of page turned before the screen will be updated completely. *Always* item provides the best quality, but consumes the most power. Less frequency may cause some artifacts from previous pages on a screen.

Open at Startup last opened book or main menu.

User Profiles can be configured. Each profile stores individual books' status, last opened books, bookmarks, notes, favorites and pre-configured network connections.

To add new profile, open the corresponding item. You will be suggested to set destination (local memory) and to enter the name from on-screen keyboard. After this current above-mentioned parameters will be stored at this profile. To activate profile open the one you need. In profile context menu you can change avatar, rename or delete profile.



LANGUAGES

Language. Select the Device's interface language.

Keyboard Layouts. Under this section you can add up to 3 keyboard layouts.



DATE/TIME

In this section you will be able to set date, time, time zone and clock format. You can also *Synchronize Time* or set *Auto Time Sync* to use the network time/date.



SAVING POWER

Here you can see battery level and set parameters, which help to save battery charge:

- *Battery Percentage*;
- *Auto screen lock* — set time of idleness, after which the Device is locked: off, 5 min, 10 min.
- *Power off after* — set time of idleness, after which the Device power off: 10, 20, 30 or 60 minutes.



MAINTENANCE

USB Mode — set how the Device handles USB connection by default: *PC link*, *Charge* **or** *Ask when connected*.

Privacy

- *Protect Configurations by Password* — in this section you can protect your setting by password. Select *Set Password* section and type the password from on-screen keyboard. Now each time you try to enter *Settings* section, you will be asked to enter the password. You can remove or change password by selecting the corresponding item. To proceed, you will be asked to enter the password once more.

- *Diagnostic and Usage* — software provides data to PocketBook about some actions, performed by a user on the Device for the further improvement of the Device and services to users. The serial number and any other information for identifying a user isn't saved. You can disable this option of statistics gathering in the *Diagnostic and Usage* section.

Factory Reset – the Device state will be reset to factory default settings, erasing user settings. Other data (e.g. books, photos) won't be lost;

Demo mode - switching demo mode for the Device. To activate demonstration mode check *On* in the *Demo mode* item.



SOFTWARE

Software Version - the current version of firmware is displayed.

Software Update – the Device will search for updates in the following order: internal storage and Internet.

Auto Update – turn on/off automatic check for updates.



ABOUT DEVICE

The following information about Device will be displayed:

Device Model (model, serial number, hardware platform, Wi-Fi MAC address),

Memory (operative memory, total and available internal memory):

Format Internal Memory – this action will erase all data, except system files.

CAUTION! If you need to erase all data on the Device, use this feature only, don't try to format the Device internal memory via PC.

Format SD card – this action will erase all data from the external microSD card.

To format the SD card select *Settings > Maintenance > Format SD card*.

Legal Information – license and information about applications, used on the Device.

Third-Party Apps — license and information about third-party applications, used on the Device.

Firmware Update

WARNING! Firmware Update is a responsible operation, during which management software of the Device will be changed. In case of improper execution control program may be damaged and will require treatment in the service centre. Please perform the upgrade procedure in accordance with the instructions below.

There are two ways to update the firmware.

Automatic Update

To start automatic software update select *Settings > Software > Software Update*. The Device will begin to check available update sources in the following order:

- MicroSD card (if installed);
- internal memory;
- Internet.

If default Internet connection is not set, the Device will ask to connect to one of available wireless networks.

Also you can activate the automatic updates check (*Settings > Software > Auto Update*). In this case, the Device will use Wi-Fi connection only.

NOTE: You can check your Firmware version in *Settings > Software > Firmware Version*

Manual Update



1. Open site www.pocketbook.ch on your PC. Select your country.
2. Click the *Support* button on top menu. Select hardware model of your Device
3. Download the *Firmware* to your PC
4. Unpack the content of the archive, file SWUPDATE.BIN, and copy it to the root folder of MicroSD-Card or internal Device storage
5. Switch off the Device by pressing button **On/Off**.
6. Switch on the Device by pressing **On/Off**. Hold both **Backward** and **Forward** buttons until the message *Firmware update...* is displayed on the screen.

NOTE: If the firmware file is located on the SD card, it will have a higher priority in comparison with the file stored in the Device's root folder during the update process.

Troubleshooting

Error Message	Reason	Correction Method
<i>No upgrade image found</i>	File SWUPDATE.BIN cannot be found on the microSD card. Make sure the file is in the root folder of the card.	Try to format your Micro SD card (make a backup copies of all its content prior to formatting) and copy the file to the root of the empty card. If this error persists, use another card.
<i>Upgrade image is corrupted or Image is empty</i>	SWUPDATE.BIN file is damaged or there is no space available on the microSD card.	Delete some files from your card and copy SWUPDATE.BIN file on it one more time. Repeat the download from www.pocketbook.ch . If this error repeats, use other card.
<i>File read error</i>	MicroSD card error	Try to use another MicroSD card
<i>Error. A different firmware version is installed on the device</i>	A firmware file of an older version is stored in the device internal memory.	Delete the old version of the firmware file from the Device's internal memory root folder

Troubleshooting

Malfunction	Possible Reason	Solution
Device does not turn on or turns on but only the logo is loaded	Battery is low	Charge the battery
A book does not open — the message <i>Book is probably damaged or protected</i> appears, or nothing happens at all	The book is damaged	If the book was downloaded from the online store try to re-load it again. If the file opens on your PC, but does not open on the Device, save the book in another format (TXT, DOC, PDF).
Html book opens but is displayed incorrectly. For example, there are empty pages, some part of the text is missing etc.	HTML-files contain non-text elements (frames, JAVA-scripts, flash-elements)	Save the page in TXT format
Book opens but various symbols, question marks etc. are displayed instead of letters	Incorrect encoding	Switch to reading mode, select <i>Settings</i> and change encoding
No response when you press any key	Sometimes (e.g., when downloading damaged or too large books) the Device may freeze	Close the frozen application by pressing  /  keys simultaneously for 1–2 sec.
After connection to PC disks are not displayed in Explorer	Your Device is in the battery charging mode.	Check USB mode in <i>Settings</i> Main Menu item. Set <i>Connection to PC</i> or <i>Ask at Connection</i>
	No signal in connection cable	Check USB cable condition and its proper connection to connector. Try to connect the USB-cable to another port

Malfunction	Possible Reason	Solution
Bookmarks, settings and current position in file cannot be saved	File system damaged	Connect the device to a PC and check disks. To proceed, open <i>My Computer</i> , right-click on the selected disk and select <i>Properties > Service > Check Disk</i>
	Internal memory is full	Delete books, images and/or music files that you do not need
Battery discharges too fast	Disabled automatic turning off	<i>Settings > Date/Time</i> in Main Menu. Select automatic turn off time in <i>Auto Turn Off in...</i> item

Customer Support

For detailed information about service centers in your country please use contacts below:



Deutschland

0-800-187-30-03

0-800-183-39-70

Česko

800-701-307

France

0-805-080-277

Österreich

0-800-802-077

0-800-281-770

Polska

0-800-141-01-12

Switzerland

0-800-898-720

ישראל

1-809-494-246



www.pocketbook.ch



help@pocketbook.ch

Compliance with International Standards

Product name:	PocketBook Basic Lux 3
Model name:	PB617
Firmware:	6.6

The EUT should be supplied by USB port from complied Limited Power Source of personal computer or notebook.

The EUT should be supplied by Adapter from complied Limited Power Source.

Rated output voltage: DC 5V 1A.

This equipment is marked with the symbol and can be used throughout the European community. This indicates compliance with the R&TTE Directive 1999/5/EC. France – 2.4GHz for Metropolitan France. In all Metropolitan departments, wireless LAN frequencies can be used under the following conditions, either for public or private use:

- Indoor use: maximum power (EIRP*) of 100 mW for the entire 2400-2483.5 MHz frequency band
- Outdoor use: maximum power (EIRP*) of 100 mW for the 2400-2454 MHz band and with maximum power (EIRP*) of 10 mW for the 2454-2483 MHz band.

IMPORTANT: Changes or modifications to this product not authorized could void the EMC and wireless compliance and negate your authority to operate the product. This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

Certification information (SAR)

The device meets guidelines for exposure to radio waves. Your device is a radio transmitter and receiver. It is designed not

to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. This equipment complies with the European Council Recommendation of 12 July 1999 on the Limitation of Exposure of the General Public to Electromagnetic Fields [1999/519/EC].

Pocketbook International SA
Crocicchio Cortogna, 6, 6900, Lugano, Switzerland
Tel. 0 800 187 3003
Made in China

Contains Reader® Mobile technology
by Adobe Systems Incorporated

